
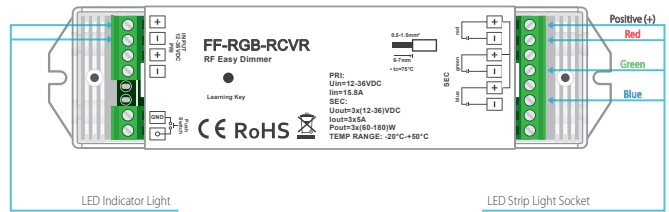


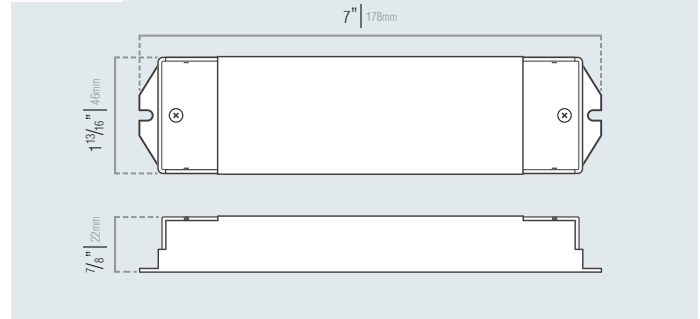

## Control

Input →

Output →

DIMENSIONS  
(inch/mm)

## DETAILS

|                |   |
|----------------|---|
| PRODUCT NAME   | In-Line Receiver for RGB Color Changing Series  |
| SKU            | FF - RGB - RCVR   |
| DESCRIPTION    | <p>The Flexfire LEDs wireless receivers allow you to control different lighting areas with a push of a button.</p> <p>Simply pair a desktop or wireless wall dimmer to this receiver and enjoy flawless on/off control and dimming.</p> <p>You can pair up to 8 desktop or wireless wall dimmers to each receiver, but an infinite amount of receivers to a single desktop or wireless wall dimmer.</p> |
| WIRELESS RANGE | 98 ft (30 m)  |
| OUTPUT CURRENT | 3x5A  |
| INPUT VOLTAGE  | 5-24V DC  |
| MAXIMUM LOAD   | <p>12V DC: 180w</p> <p>24V DC: 360w</p>   |

## SYNC INSTRUCTIONS

1. Remove the cover on the left side of the receiver.
2. Insert positive and negative wires from power supply/transformer into the positive and negative terminals.
3. Make sure power is on and tap the Learning Key button one time.
4. Tap the rotary knob on the wall or desktop wireless dimmer one time.

## COMPATIBLE WITH:

- FF - RGB - WALL - W (B)
- FF - RGB - DSK - B