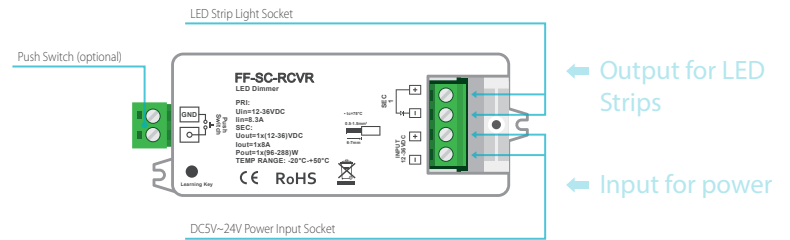
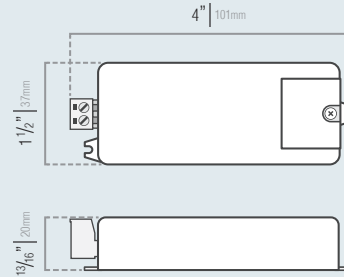


## Receiver

DIMENSIONS  
(inch/mm)

## DETAILS

PRODUCT NAME	In-Line Receiver for Single Color Series
SKU	FF-SC-RCVR
DESCRIPTION	<p>The Flexfire LEDs wireless receivers allow you to control different lighting areas with a push of a button.</p> <p>Simply pair a desktop or wireless wall dimmer to this receiver and enjoy flawless on/off control and dimming.</p> <p>You can pair up to 8 desktop or wireless wall dimmers to each receiver, but an infinite amount of receivers to a single desktop or wireless wall dimmer.</p>
WIRELESS RANGE	98 ft (30 m)
OUTPUT CURRENT	8A
INPUT VOLTAGE	5-24V DC
MAXIMUM LOAD	<p>12V DC: 96w</p> <p>24V DC: 192w</p>

## SYNC INSTRUCTIONS

1. Remove the cover on the right side of the receiver.
2. Insert positive and negative wires from the power source (5-24V DC) into the input of the receiver.
3. Tap the learning key button one time.
4. Tap the rotary knob on the wall or desktop wireless dimmer one time.

## COMPATIBLE WITH:

- FF-SC-WALL-W(B)
- FF-SC-DSK-B