 





Mini-Driver for DMX Lite Controllers

Important: Read all the instructions before installation

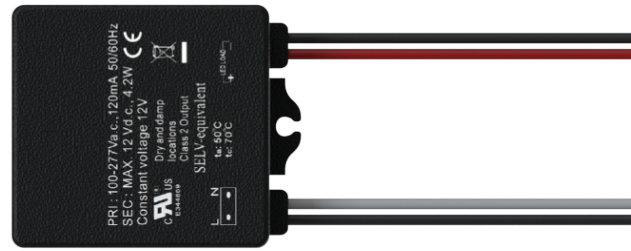

 ✓ Mini-Driver

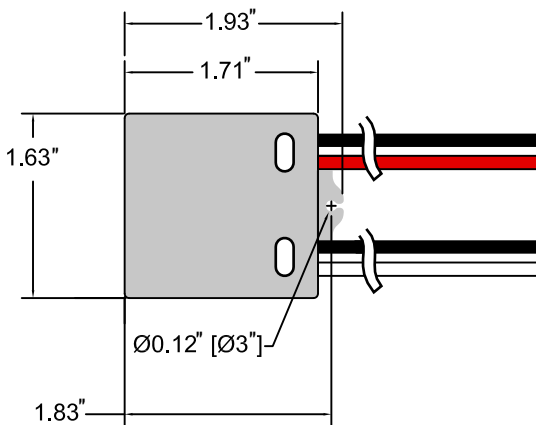

Output		
Color	Symbol	Type
Black	-	V-
Red	+	V+

Input		
Color	Symbol	Type
Black	L	Line
White	N	Neutral

✓ Product Data

Input Voltage	Output Power	Output Current	Size
120-277V AC	3W (12V)	0.12 A	L: 1.71" (43.4 mm) W: 1.63" (41.4 mm) H: 0.90" (23 mm)

 
✓ Product Features

- Compact size for superior design flexibility.
- 1.71"(L) x 1.63" (W) x 0.9" (H) in size.
- Full voltage input range at 120-277VAC
- Fits inside a single gang box
- Short circuit protection
- Overload protection
- UL Component Recognized and CE certified
- Class 2 rated


✓ Tools Needed




Flat-Head
Screwdriver



Small-Flat Head
Screwdriver

 


Phillips-Head
Screwdriver

 

Wire
Strippers


Installation

 1.

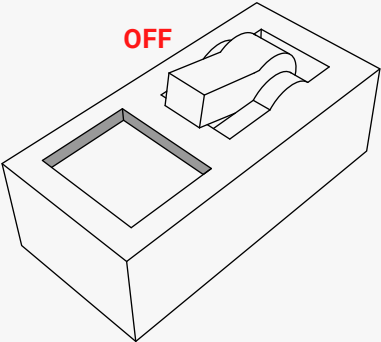


Shut off power at the main breaker before attempting installation. Test to make sure the power is off with a multimeter.

 2.

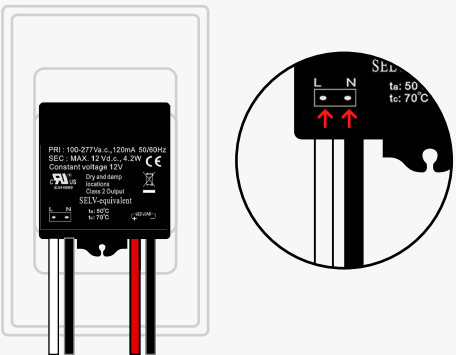


Attach the Input Power L and N wires on the Mini-Driver to the AC Live and Neutral wires respectively. Use only correctly-sized UL Listed wire nuts with this Mini-Driver.

 3.

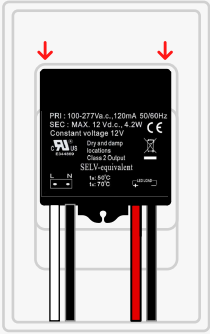


Place the Mini-Driver on the upper corner of the gang box. This will leave enough room for the wires to sit comfortably.

 4.

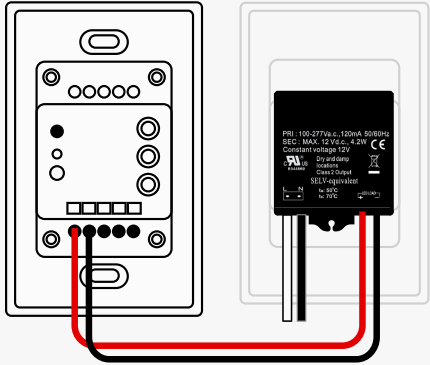


Attach the output V+ and V- wires on the Mini-Driver to the "V+" and "-" terminals on the DC Input of your DMX Lite Controller. Use the screw terminals.

 5.

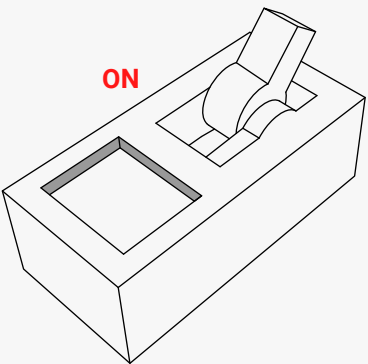

Make sure all connections are tight. Finish the rest of your DMX installation. Once installation is complete and connections are covered, turn on the power at the main breaker.

 6.

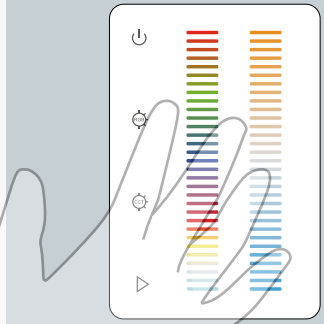

If you experience any issues at all with your setup, please be sure to contact us at After Sales Support.

Warranty Information

Limited Warranty: This product has a 5 year limited warranty from the date of shipment. This warranty only includes the main product outlined in this specification sheet and does not include the additional accessories that are used as a reference. Complete warranty details for fixtures and additional accessories are available at: <https://www.flexfireleds.com/warranties/> within the Policies section. For warranty related questions please contact our product support team at(support@flexfireleds.com).

Consumer's Acknowledgment

Flexfire LEDs, Inc. stands behind its products when they are used properly and according to our specifications. When you purchase our products, you are agreeing to the terms and conditions outlined in our warranty section. We try our best to make recommendations, but the burden of proper installation, design, and maintenance relies on the purchaser. This limited warranty does not include product failures that are the result of: Not using a voltage regulated power supply to connect the LED product or controls; Connecting LED products to the wrong output voltage; Improper connection of power supplies, LED products, or controls; Connecting LED products or controls directly to any AC power source if they are stated for DC only input; Connecting power supplies backwards to an AC power source; Products used in an inappropriate location or in environmental conditions (temperature, humidity, moisture, etc.) outside the normal specified range; Water damage to products not specifically sold as waterproof products; Electrical power surges and spikes; Damage from hail, flooding, tornado, fire, wind, earthquake, lightning, electrical storm, or any other natural disasters or "force majeure" incidences; Damage caused by a vehicle or other accident; Damage caused when transporting the item; Damage to any products that were modified by the user, used for purposes other than as intended or directed, or connected to LED systems or components not purchased from Flexfire LEDs; Products that have been subjected to misuse, mishandling, misapplication or accident. Products used in connection with any components, devices or systems other than those explicitly approved as compatible with Company's products and listed on Company's website. Excessive wear and tear and/or physical or accidental abuse, loss, or theft. Improper repairs or warranty services performed by someone other than Flexfire LEDs will void this warranty.

Contact Information



Toll Free Number:
1-844-353-9347



www.flexfireleds.com



Local Number:
(925) 273-9080



support@flexfireleds.com



FLEXFIRELEDs

www.flexfireleds.com