Caséta Wireless Advanced Installation Guide

In-wall dimmer & PRO dimmer PD-6WCL/PD-10NXD	ELV+ Dimmer PD-5NE	Plug-in lamp dimmer PD-3PCL	In-wall switch PD-5WS-DV/ PD-5ANS/PD-6ANS	Fan Control PD-FSQN S	Motion Sensor PD-OSENS/ PD-VSENS
Thenk you for ou		Windless frame Lutres Th		ببيمع والعنيمين والجارب والمأب	

Thank you for purchasing Caséta Wireless from Lutron. This document will guide you through several additional installation topics beyond those covered in the quick-start guide included with your product.

Table of Contents

3-Way Installation - If you have two switches controlling your lights, follow this procedure to install your in-wall dir	nmer or switch
With a Pico Remote Control	
In-Wall Dimmer with Pico Remote Control (PD-6WCL):	
In-Wall Switch with Pico Remote Control (PD-5WS-DV):	
In-Wall PRO Dimmer with Pico Remote Control (PD-10NXD):	. Page 11 - 14
In-Wall Neutral Switch with Pico Remote Control (PD-5ANS/PD-6ANS):	. Page 15 - 18
In-Wall ELV+ Dimmer with Pico Remote Control (PD-5NE):	
In-Wall Fan Control with Pico Remote Control (PD-FSQN):	Page 23 - 26
With a Mechanical Toggle Switch	
In-Wall Switch with Mechanical Toggle Switch (PD-5WS-DV):	
In-Wall PRO Dimmer with Mechanical Toggle Switch (PD-10NXD):	
In-Wall Neutral Switch with Mechanical Toggle Switch (PD-5ANS/PD-6ANS):	. Page 33 - 35
Multi-Location Installation - If you have three or more switches controlling your lights, follow this procedure to install your in-wall dimmer or switch	
In-Wall Dimmer with Pico Remote Controls (PD-6WCL):	
In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD):	
In-Wall Switch with Pico Remote Controls (PD-5WS-DV):	
In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS):	
In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE):	
In-Wall Fan Control with Pico Remote Controls (PD-FSQN):	Page 61 - 65
Adjusting the Low-End Trim - Follow this procedure if you experience performance issues such as flickering, flashing or other abnormal light behavior when your dimmer is at a low light level	
On an In-Wall Dimmer (PD-6WCL):	Page 66
On an In-Wall PRO Dimmer (PD-10NXD):	
On an In-Wall ELV+ Dimmer (PD-5NE):	
On a Plug-In Lamp Dimmer (PD-3PCL):	Page 72
Adjusting the High-End Trim - Follow this procedure to adjust the maximum light output allowed by your in-wall dimmer	
On an In-Wall Dimmer (PD-6WCL):	. Page 67
On an In-Wall PRO Dimmer (PD-10NXD):	. Page 69
On an In-Wall ELV+ Dimmer (PD-5NE):	. Page 71
On a Plug-In Lamp Dimmer (PD-3PCL):	. Page 73
Converting a Plug-In Lamp Dimmer to a Switch to Control Non-Dim Loads (Lights Only) (PD-3P Follow this procedure if you would like your plug-in lamp dimmer to act as a switch for non-dimmable lighting loads	<u>'CL)</u> Page 74
Setting Dimmer Phase on a Caséta Wireless In-Wall ELV+ Dimmer (PD-5NE)	. Page 75
Removing Paired Pico Remote Controls - Follow this procedure if you need to remove paired Pico remote controls or reset your dimmer or switch to its factory default settin	as
From a Dimmer (PD-6WCL/PD-10NXD/PD-5NE/PD-3PCL):	
From an In-Wall Switch (PD-5WS-DV/PD-5ANS/PD-6ANS):	
From a Fan Control (PD-FSQN):	
From a Lutron Shade:	
	on next page)



Table of Contents (continued)


Changing the Favorite Light Level on a Pico Remote Control - Follow this procedure to change the light level your in-wall dimmer recalls when you press the "Favorite" button on your Pico remote control	Page 81
Changing the Favorite Light Level on an ELV+ Dimmer (PD-5NE) - Follow this procedure to change the light level your in-wall dimmer recalls when you press the "Favorite" button on your Phase Selectable Dimmer	Page 82
Changing the Favorite Fan Speed Setting on a Fan Control (PD-FSQN) - Follow this procedure to change the fan speed your control recalls when you press the "Favorite" button on your Fan Control	Page 83
Installing a LUT-MLC Load Adapter with an In-Wall Switch (PD-5WS-DV) - The LUT-MLC is provided to help ensure proper operation of the Caséta Wireless in-wall switch with LED, fluorescent, and ELV lighting loads	Page 84
Motion Sensor Placement and Coverage (PD-OSENS/PD-VSENS) -	Page 85-90
Motion Sensor Advanced Features (PD-OSENS/PD-VSENS) -	Page 91
Troubleshooting -	Page 92-93



<u>Caséta</u> Wireless

3-Way Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Control (PD-6WCL)

1 Identify existing wiring

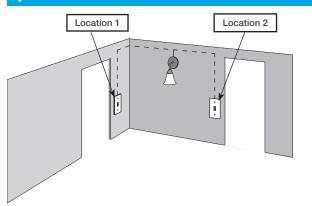

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If three or more switches control the lights
- (multi-location installation) See page 36 for details

2 What you need for a 3-way installation





CW-1

In-wall dimmer PD-6WCL




Pico remote control with wall-mounting kit PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

Choose which location you want the Caséta Wireless in-wall dimmer installed in. This will be Location 1.


4 Turn power off at circuit breaker

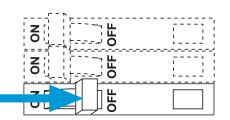





WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

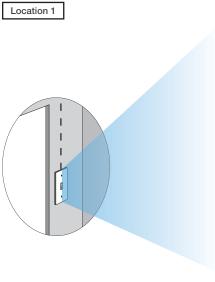

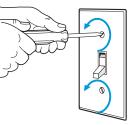

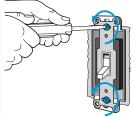

6 Tag and disconnect wires from the existing switch

Location 1





Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections on dimmers at the end of gang.

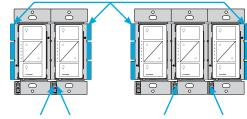

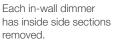


Dimmer in the middle has all side sections removed.

Important note:


Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.

	_	Â			
Total Dimmable LED Wattage		Incandescent/H	Incandescent/Halogen Total Wattage		
		•	3	Θ	
0 W	+	600 W	500 W	400 W	
1 W – 25 W	+	500 W	400 W	300 W	
26 W - 50 W	+	400 W	300 W	200 W	
51 W – 75 W	+	300 W	200 W	100 W	
76 W – 100 W	+	200 W	100 W	50 W	
101 W - 125 W	+	100 W	50 W	0 W	
126 W - 150 W	+	0 W	0 W	0 W	

8 **Connect the Caséta Wireless in-wall dimmer**

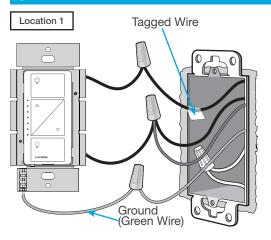

9 Mount the Caséta Wireless in-wall dimmer

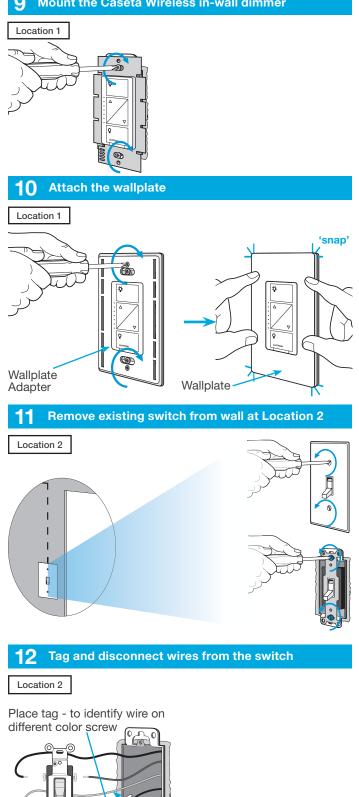

Ground (Green/Bare Copper)




Different @

Color

Screw


Caséta Wireless 3-Way Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Control (PD-6WCL)

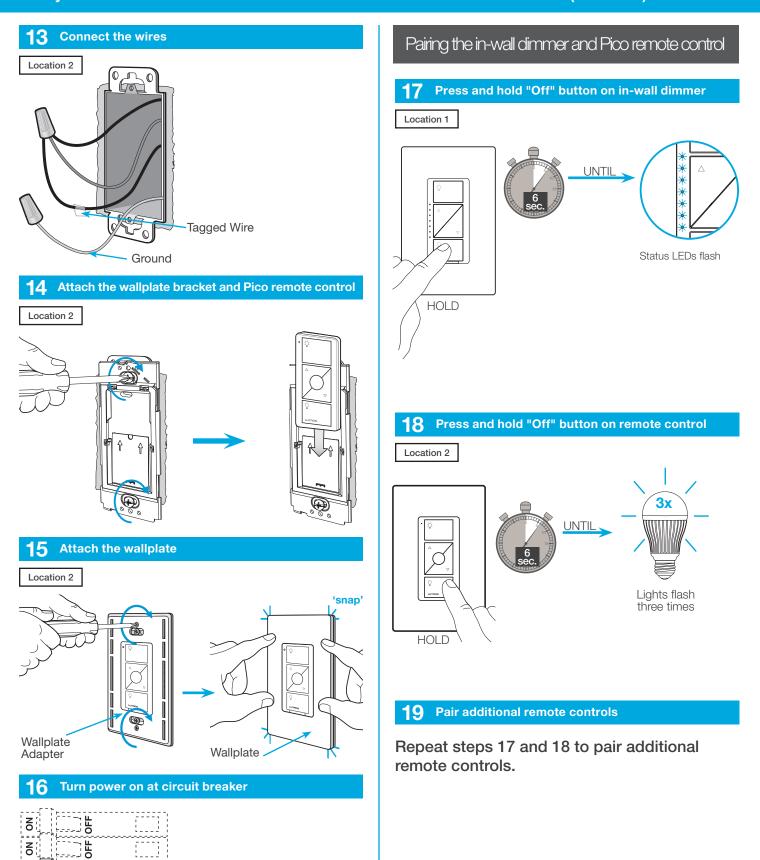



N

Schematic Diagram

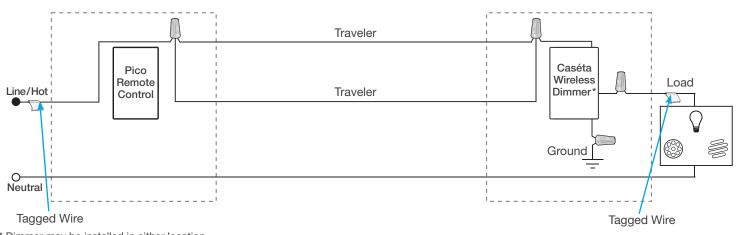


* Dimmer may be installed in either location.



3-Way Installation - Caséta Wireless In-Wall Switch with Pico Remote Control (PD-5WS-DV)

1 Identify existing wiring

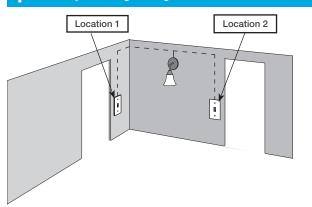

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If three or more switches control the lights
- (multi-location installation) See page 46 for details

2 What you need for a 3-way installation



PD-5WS-DV

- C



Pico remote control PJ2-2B



Wallplate Bracket PICO-WBX-ADAPT




Two Claro Wallplates CW-1

3 Choose a location for your Caséta Wireless in-wall switch

Choose which location you want the Caséta Wireless in-wall switch installed in. This will be Location 1.


4 Turn power off at circuit breaker

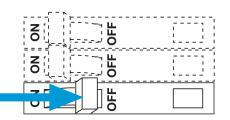



WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

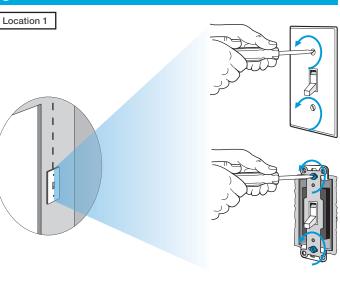

6 Tag and disconnect wires from the existing switch

Location 1

Place tag - to identify wire on different color screw




3-Way Installation - Caséta Wireless In-Wall Switch with Pico Remote Control (PD-5WS-DV)

7 **Ganging and De-rating**


		88	8 6 8
PD-5WS-DV (120 V~)	0		G
LED	5 A	4 A	3 A
Halogen/incandescent	600 W	450 W	350 W
Electronic Low-Voltage	600 W	450 W	350 W
Magnetic Low-Voltage ¹	600 VA/475 W	450 VA/350 W	350 VA/275 W
Fluorescent ²	5 A	4 A	3 A
General Purpose Fan	3 A	3 A	3 A
PD-5WS-DV (277 V∼)	•	6	Θ
LED	5 A	4 A	3 A
Halogen/incandescent	1350 W	1100 W	800 W
Electronic Low-Voltage	1350 W	1100 W	800 W
Magnetic Low-Voltage ¹	1350 VA/1075 W	1100 VA/875 W	800 VA/625 W
Fluorescent ²	5 A	4 A	3 A

¹ The maximum lamp wattage is determined by the efficiency of the transformer, with 70% - 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.


² The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.

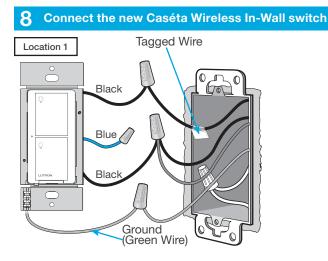


9 Mount the Caséta Wireless In-Wall switch

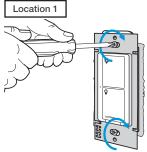


10 Attach the wallplate

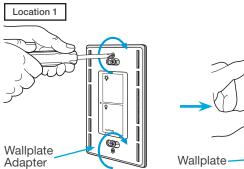

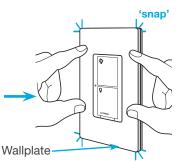


Remove existing switch from wall at Location 2 11

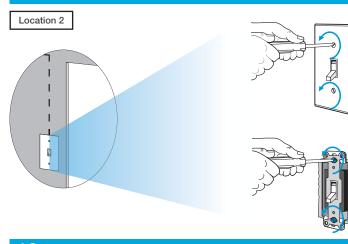

12 Tag and disconnect wires from the existing switch

Location 2


Place tag - to identify wire on different color screw 1

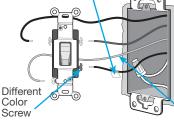

Ground (Green/Bare Copper)




Case fa Wireless 3-Way Installation - Caséta Wireless In-Wall Switch with Pico Remote Control (PD-5WS-DV)

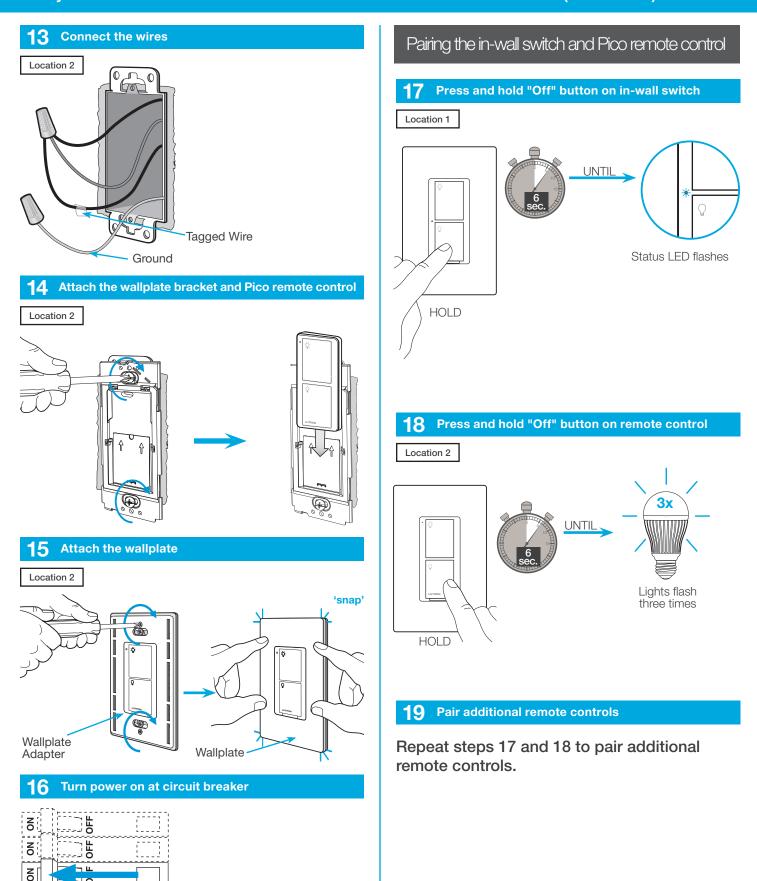



Schematic Diagram

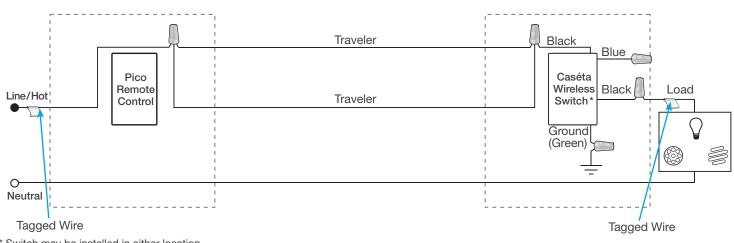


* Switch may be installed in either location.



3-Way Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Control (PD-10NXD)

1 Identify existing wiring

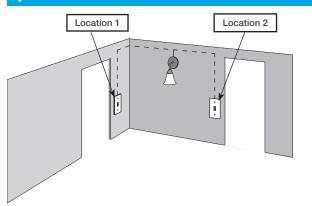

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If three or more switches control the lights (multi-location installation) See page 41 for details

2 What you need for a 3-way installation





Claro Wallplate

CW-1

In-wall PRO dimmer PD-10NXD




Pico remote control with wall-mounting kit PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

Choose which location you want the Caséta Wireless in-wall dimmer installed in. This will be Location 1.


4 Turn power off at circuit breaker

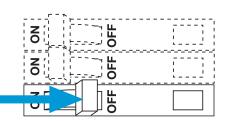




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

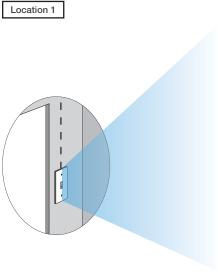

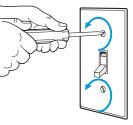



6 Tag and disconnect wires from the existing switch


Location 1

Place tag - to identify wire on different color screw




Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.

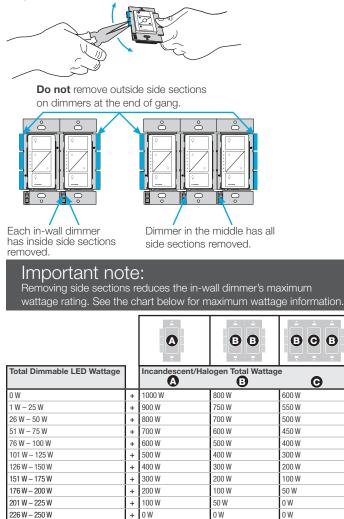


8 Connect the Caséta Wireless in-wall dimmer

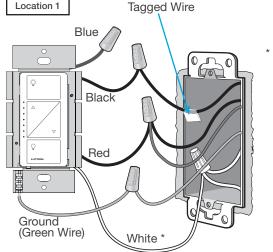

* If available, connect the neutral wire from the wallbox to the white wire on the in-wall dimmer. If neutral is not available, cap the white wire with a wire connector. Neutral required for: MLV loads, LED drivers, PHPM-PA, PHPM-3F. GRX-TVI.

9 Mount the Caséta Wireless in-wall dimmer

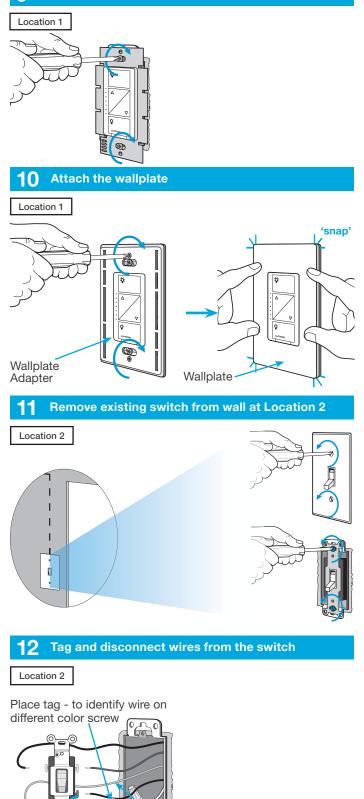

Ground (Green/Bare Copper)


LUTRON

Different @

Color

Screw


Casé fa Wireless 3-Way Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Control (PD-10NXD)

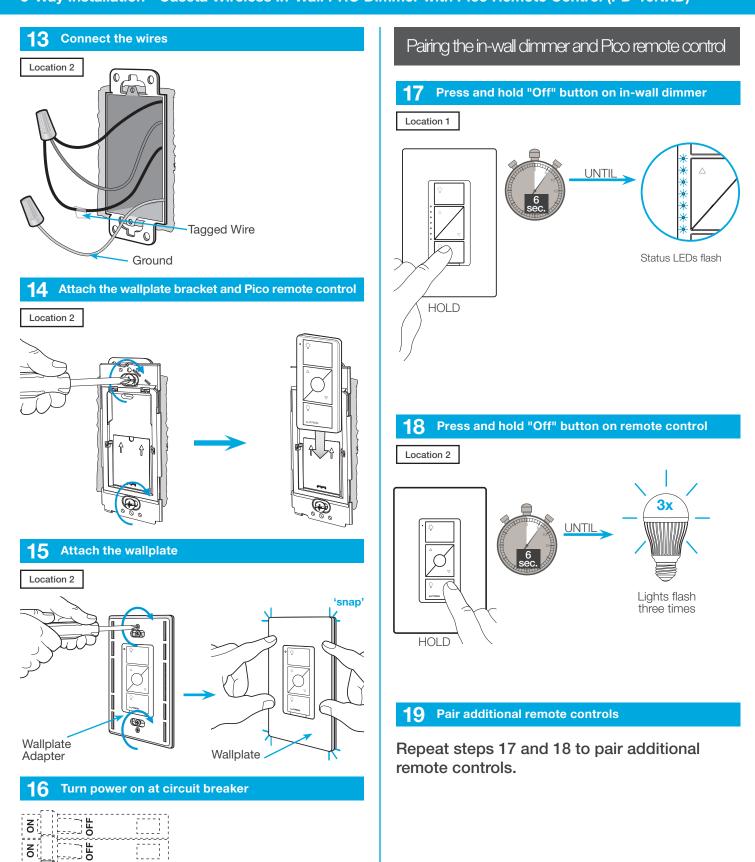



N

Schematic Diagram

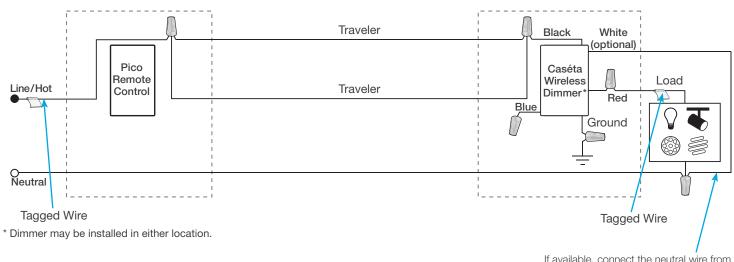


If available, connect the neutral wire from the wallbox to the white wire on the in-wall dimmer. If neutral is not available, cap the white wire with a wire connector. *Neutral required for: MLV loads, LED drivers, PHPM-PA, PHPM-3F, GRX-TVI.*



3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Control (PD-5ANS/PD-6ANS)

Identify existing wiring

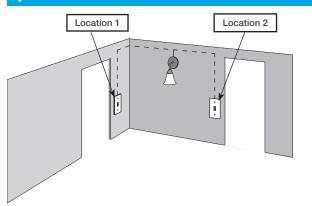

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If three or more switches control the lights
- (multi-location installation) See page 51 for details

2 What you need for a 3-way installation



In-wall switch PD-5ANS/PD-6ANS



Wallplate Bracket PICO-WBX-ADAPT



PJ2-2B




CW-1

3 Choose a location for your Caséta Wireless in-wall switch

Choose which location you want the Caséta Wireless in-wall switch installed in. This will be Location 1.


4 Turn power off at circuit breaker

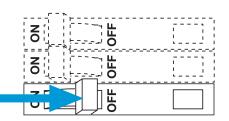




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

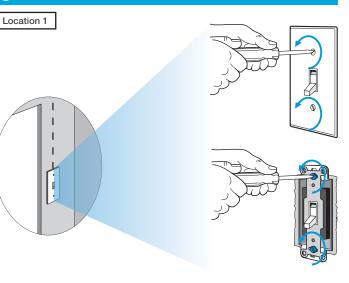

6 Tag and disconnect wires from the existing switch


Location 1

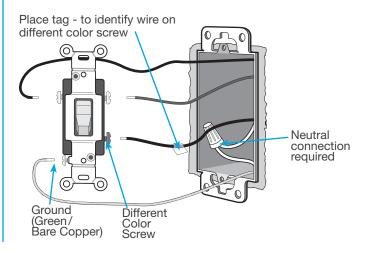



Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall switch in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.

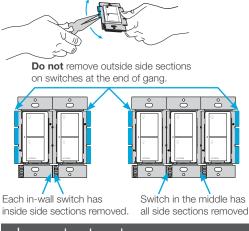

Important note:


Removing side sections reduces the in-wall switch's maximum wattage rating. See the chart below for maximum wattage information.

		88	
PD-5ANS/PD-6ANS (120 V~)1	•		G
LED	6 A	6 A	5 A
Halogen/incandescent	720 W	720 W	600 W
Electronic Low-Voltage	720 VA	720 VA	600 VA
Magnetic Low-Voltage ²	720 VA	720 VA	600 VA
Fluorescent ³	6 A	6 A	5 A
General Purpose Fan	3.6 A	3.6 A	3.6 A

¹ Neutral required.

² The maximum lamp wattage is determined by the efficiency of the transformer, with 70% – 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.

³ The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.

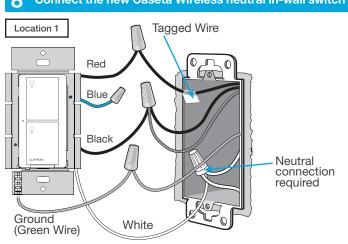



8 Connect the new Caséta Wireless neutral in-wall switch

9 Mount the Caséta Wireless in-wall neutral switch






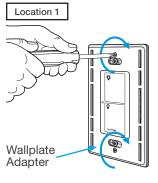


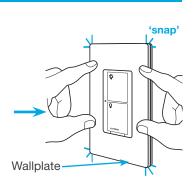


Remove existing switch from wall at Location 2

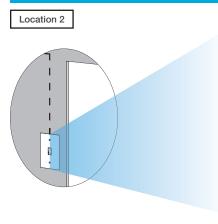



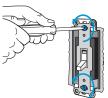


12 Tag and disconnect wires from the existing switch

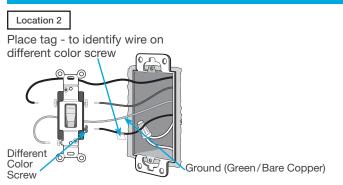




3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Control (PD-5ANS/PD-6ANS)

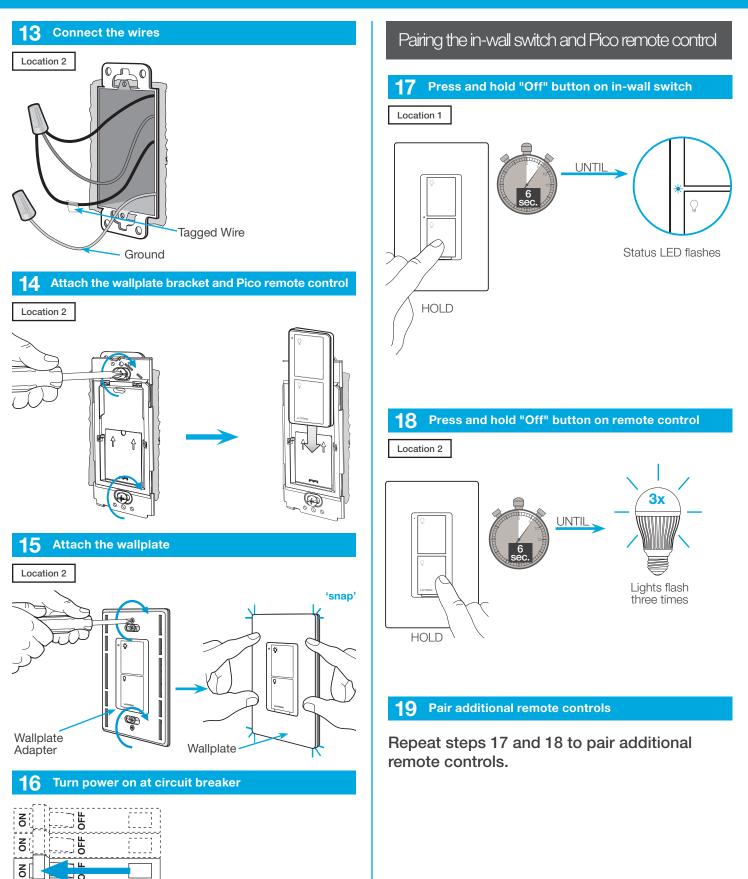



3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Control (PD-5ANS/PD-6ANS)

Schematic Diagram

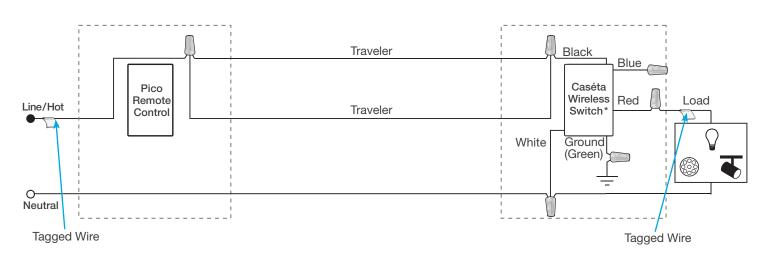

* Switch may be installed in either location.


Note: The red wire must be connected to the load and the black wire must be connected to Line/Hot. The product will not work if the wires are reversed.



<u>Caséta</u> Wireless

3-Way Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Control (PD-5NE)

1 Identify existing wiring

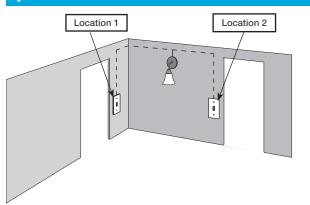


Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If three or more switches control the lights (multi-location installation) See page 56 for details

2 What you need for a 3-way installation

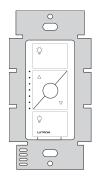



Claro Wallplate

CW-1

ELV+ in-wall dimmer PD-5NE




Pico remote control with wall-mounting kit PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

Choose which location you want the Caséta Wireless in-wall dimmer installed in. This will be Location 1.


4 Turn power off at circuit breaker

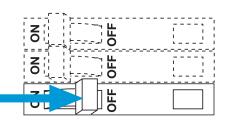





WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

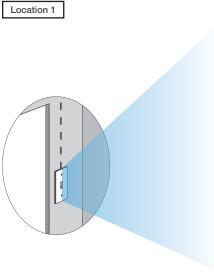


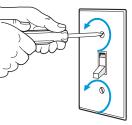

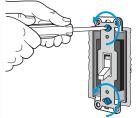

6 Tag and disconnect wires from the existing switch


Location 1

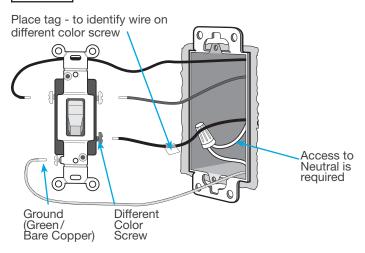





Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.

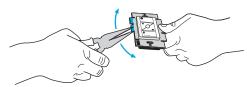

Do not remove outside side sections on dimmers at the end of gang.

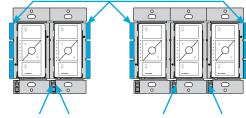

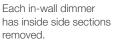


Dimmer in the middle has all side sections removed.


Important note:

Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.

	- - -			
PD-5NE (120 V~)1	Incandescent/Halogen Total Wattage			
LED	250 W	250 W	250 W	
Halogen / Incandescent	500 W	400 W	300 W	
Electronics Low-Voltage	500 W	400 W	300 W	
Magnetic Low Voltage	400 VA	400 VA	400 VA	

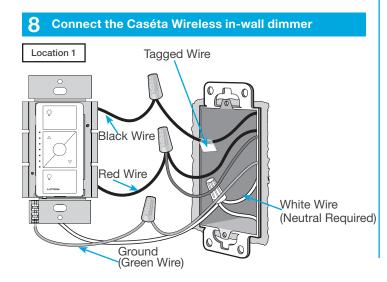

9 Mount the Caséta Wireless in-wall dimmer

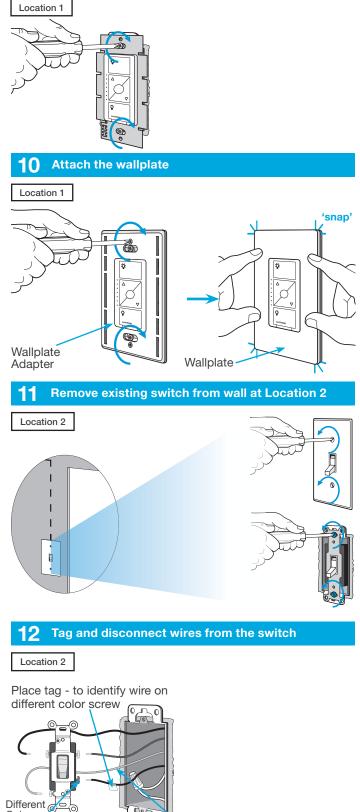


Ground (Green/Bare Copper)



Color

Screw


Caséta Wireless 3-Way Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Control (PD-5NE)

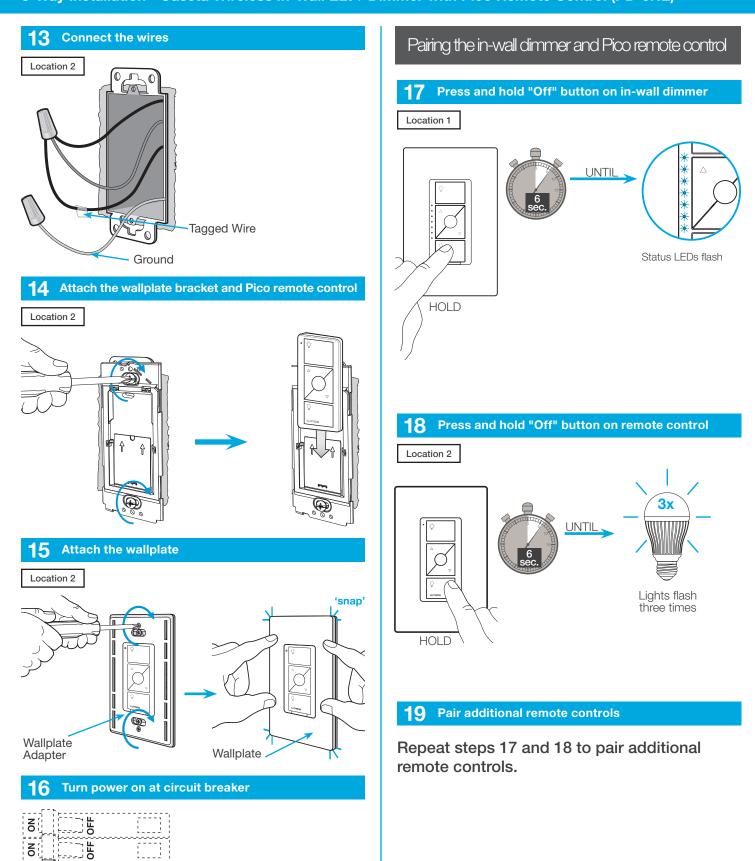



N


Schematic Diagram

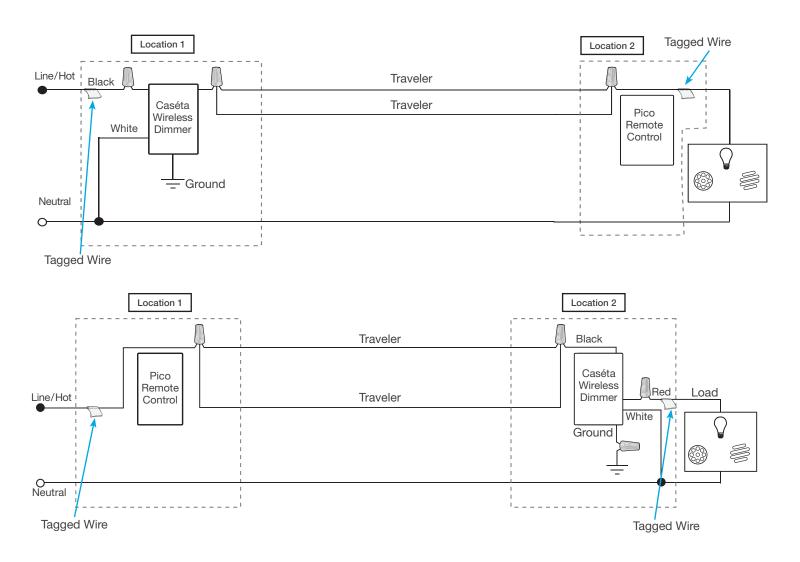



3-Way Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Control (PD-FSQN)

Identify existing wiring

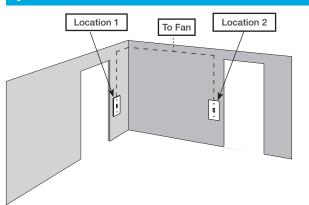


Two switches control the fan (3-way installation)

Important note:

- If one switch controls the fan (single-pole installation) See quick-start guide that came with your control
- If three or more switches control the fan
- (multi-location installation) See page 61 for details


2 What you need for a 3-way installation

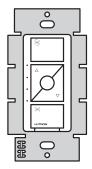

Two Claro Wallplates

÷

Fan Control PD-FSQN

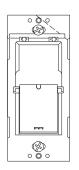

CW-1

Pico Wallbox Adapter PICO-WBX-ADAPT

Pico Remote Control


PJ2-3BRL-XXX-F01

for Fans

3 Choose a location for your Caséta Wireless fan control

Choose which location you want the Caséta Wireless fan control installed in. This will be Location 1.


4 Turn power off at circuit breaker

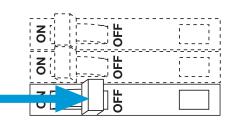




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

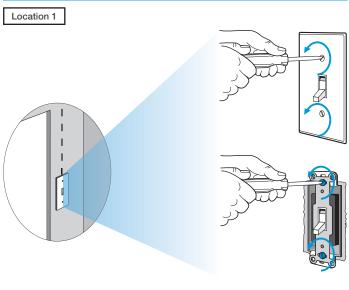

6 Tag and disconnect wires from the existing switch




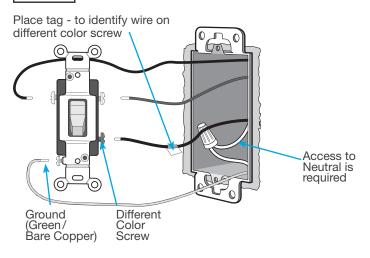




7 Remove side sections (if necessary)

When installing more than one Caséta Wireless fan control in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.

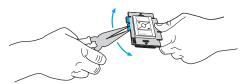


Do not remove outside side sections on fan controls at the end of gang.

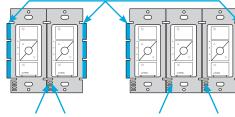


Each fan control has inside side sections removed.


Fan control in the middle has all side sections removed.

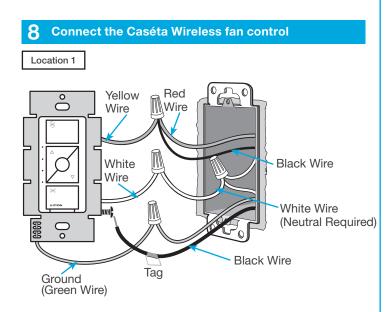


9 Mount the Caséta Wireless fan control

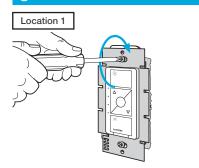

10 Attach the wallplate

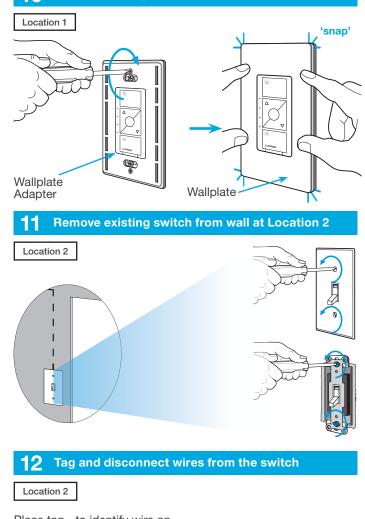


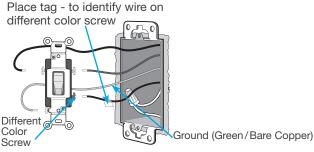


UTRON

N

3-Way Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Control (PD-FSQN)

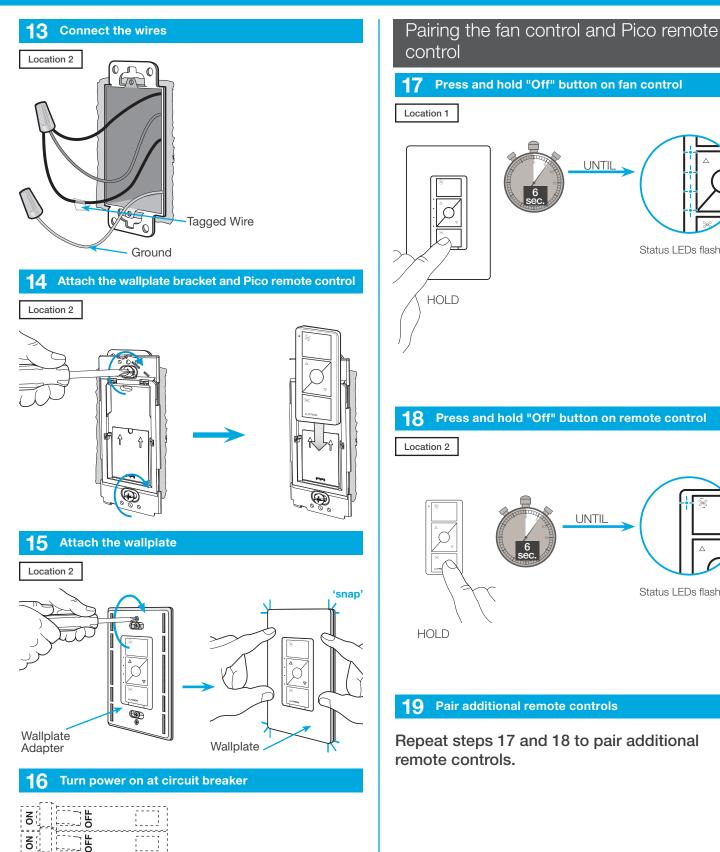

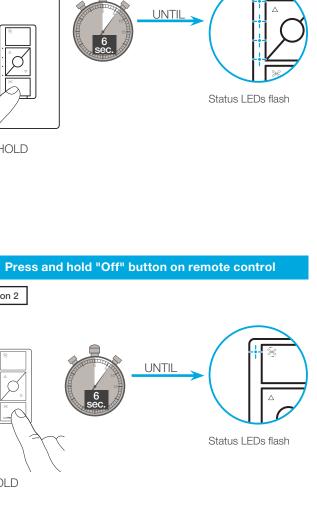


19 Pair additional remote controls

Repeat steps 17 and 18 to pair additional remote controls.



3-Way Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Control (PD-FSQN)

Schematic Diagram

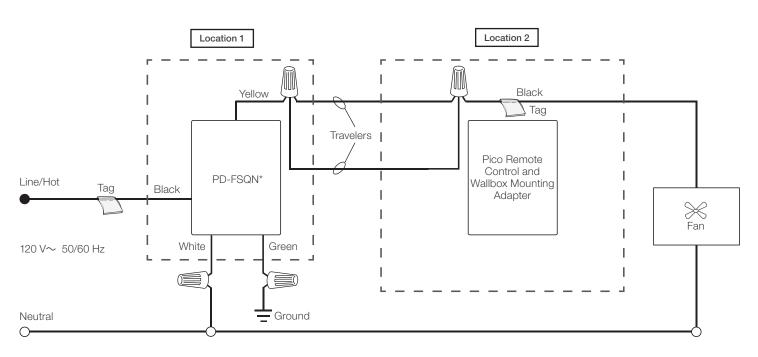


* Control can be installed in either location.

NOTE: The yellow wire must be connected to the load and the black wire must be connected to line/hot. The product will not work if the wires are reversed.



3-Way Installation - Caséta Wireless In-Wall Switch with Mechanical Toggle Switch (PD-5WS-DV)

1 Identify existing wiring

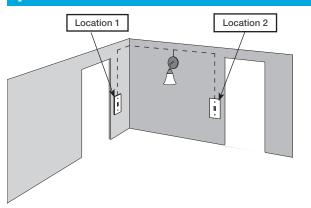

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If three or more switches control the lights
- (multi-location installation) See page 46 for details

2 What you need for a 3-way installation

┿





In-wall switch PD-5WS-DV






Existing mechanical toggle switch

3 Choose a location for your Caséta Wireless in-wall switch

Choose which location you want the Caséta Wireless in-wall switch installed in. This will be Location 1.


4 Turn power off at circuit breaker

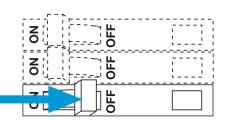




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

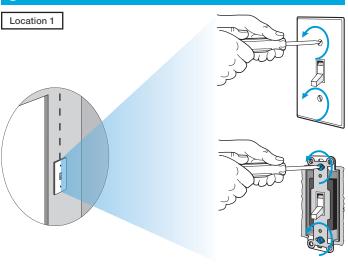

6 Tag and disconnect wires from the existing switch

Location 1

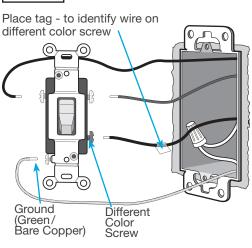





3-Way Installation - Caséta Wireless In-Wall Switch with Mechanical Toggle Switch (PD-5WS-DV)

7 Ganging and De-rating


		88	
PD-5WS-DV (120 V~)	Δ	•	G
LED	5 A	4 A	3 A
Halogen/incandescent	600 W	450 W	350 W
Electronic Low-Voltage	600 W	450 W	350 W
Magnetic Low-Voltage 1	600 VA/475 W	450 VA/350 W	350 VA/275 W
Fluorescent ²	5 A	4 A	3 A
General Purpose Fan	3 A	3 A	3 A
PD-5WS-DV (277 V~)	Δ		G
LED	5 A	4 A	3 A
Halogen/incandescent	1350 W	1100 W	800 W
Electronic Low-Voltage	1350 W	1100 W	800 W
Magnetic Low-Voltage ¹	1350 VA/1075 W	1100 VA/875 W	800 VA/625 W
Fluorescent ²	5 A	4 A	3 A


- ¹ The maximum lamp wattage is determined by the efficiency of the transformer, with 70% – 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.
- ² The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.

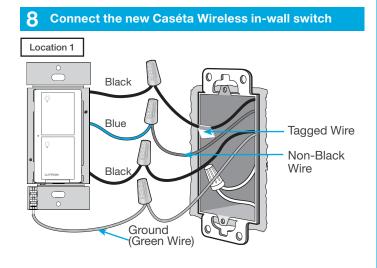

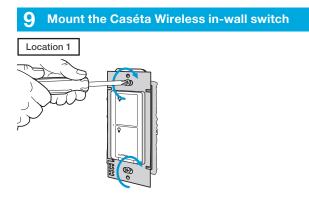


10 Attach the wallplate

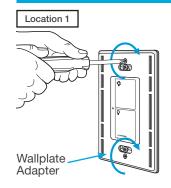

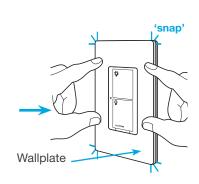

11 Remove existing toggle switch from wall at Location 2

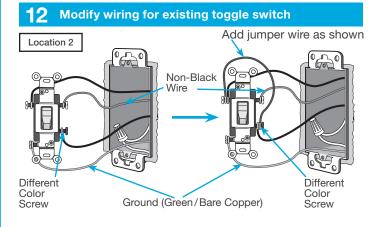


UTRON


3-Way Installation - Caséta Wireless In-Wall Switch with Mechanical Toggle Switch (PD-5WS-DV)

13 Remount existing switch



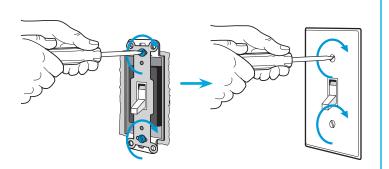


14 Turn power on at circuit breaker

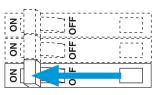

Important note: Pico remote control

If you would like to pair a Pico remote control to the Caséta Wireless in-wall switch, please follow the procedure described in the quick-start guide that came with your in-wall switch.

Schematic Diagram

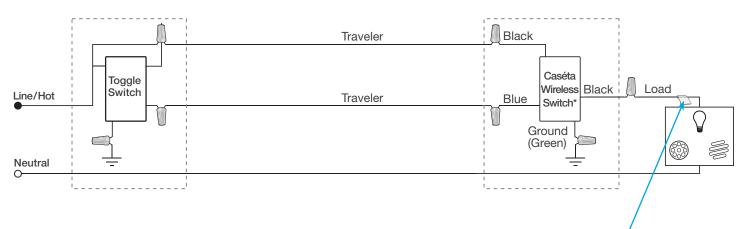


* Switch may be installed in either location.

Tagged Wire



3-Way Installation - Caséta Wireless In-Wall PRO Dimmer with Mechanical Toggle Switch (PD-10NXD)

1 Identify existing wiring

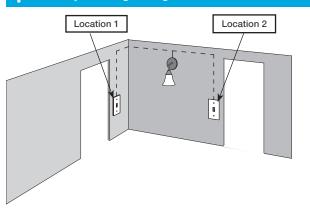


Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If three or more switches control the lights
- (multi-location installation) See page 41 for details

2 What you need for a 3-way installation

÷

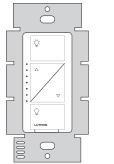



Claro Wallplate

CW-1

In-wall PRO dimmer PD-10NXD




Existing mechanical toggle switch

3 Choose a location for your Caséta Wireless in-wall dimmer

Choose which location you want the Caséta Wireless in-wall dimmer installed in. This will be Location 1.


4 Turn power off at circuit breaker

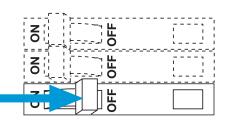




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

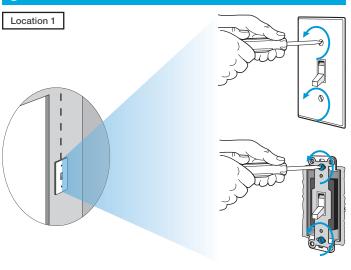

6 Tag and disconnect wires from the existing switch

Location 1

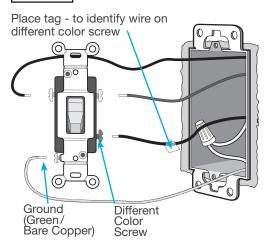




Caséta Wireless 3-Way Installation - Caséta Wireless In-Wall PRO Dimmer with Mechanical Toggle Switch (PD-10NXD)

Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections

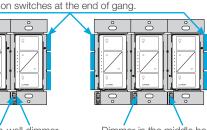

Each in-wall dimmer has inside side sections removed.


Dimmer in the middle has all side sections removed.

Important note:

Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.


	_	- - -		
Total Dimmable LED Wattage		Incandescent/Hal	ogen Total Wattag	Θ
0 W	+	1000 W	800 W	600 W
1 W – 25 W	+	900 W	750 W	550 W
26 W - 50 W	+	800 W	700 W	500 W
51 W – 75 W	+	700 W	600 W	450 W
76 W - 100 W	+	600 W	500 W	400 W
101 W - 125 W	+	500 W	400 W	300 W
126 W - 150 W	+	400 W	300 W	200 W
151 W – 175 W	+	300 W	200 W	100 W
176 W - 200 W	+	200 W	100 W	50 W
201 W - 225 W	+	100 W	50 W	0 W
226 W - 250 W	+	0 W	0 W	0 W

Connect the new Caséta Wireless in-wall dimmer 8

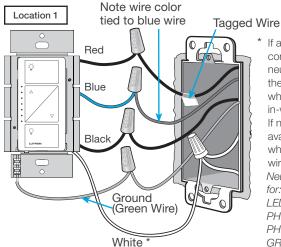


If available, connect the neutral wire from the wallbox to the white wire on the in-wall dimmer. If neutral is not available, cap the white wire with a wire connector. Neutral required for: MLV loads, LED drivers, PHPM-PA, PHPM-3F. GRX-TVI.

9 Mount the Caséta Wireless in-wall dimmer

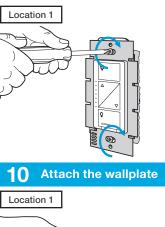


Wallplate

Adapter

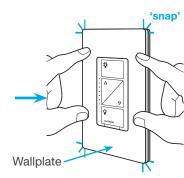


Remove existing toggle switch from wall at Location 2 11

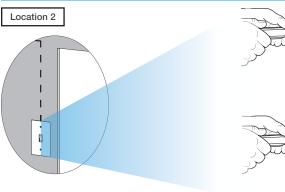





12a Modify wiring for existing toggle switch

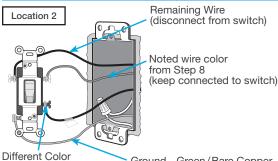


Screw/Tagged Wire (disconnect from switch)

Ground - Green/Bare Copper (keep connected to switch)




3-Way Installation - Caséta Wireless In-Wall PRO Dimmer with Mechanical Toggle Switch (PD-10NXD)

12b Modify wiring for existing toggle switch

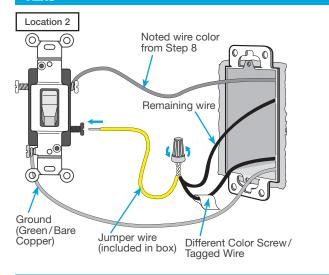


13 Remount existing switch

Location 2

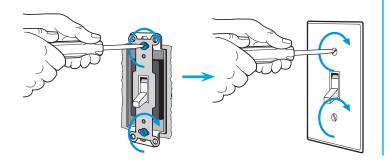

14 Turn power on at circuit breaker

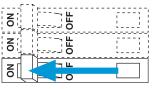


Important note: Pico remote control (optional)

If you would like to pair a Pico remote control to the Caséta Wireless in-wall dimmer, please follow the procedure described in the quick-start guide that came with your in-wall dimmer.

drivers, PHPM-PA, PHPM-3F, GRX-TVI.


Schematic Diagram

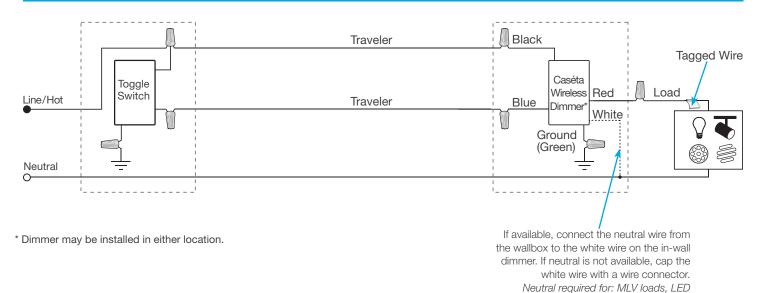

LUTRON

3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Mechanical Toggle Switch (PD-5ANS/PD-6ANS)

1 Identify existing wiring

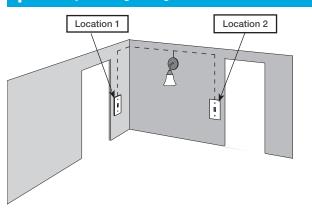

Two switches control the lights (3-way installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If three or more switches control the lights
- (multi-location installation) See page 51 for details

2 What you need for a 3-way installation





Claro Wallplate

CW-1

In-wall switch PD-5ANS/PD-6ANS




Existing mechanical toggle switch

3 Choose a location for your Caséta Wireless in-wall switch

Choose which location you want the Caséta Wireless in-wall switch installed in. This will be Location 1.


4 Turn power off at circuit breaker

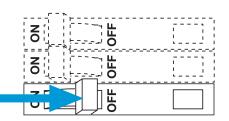




WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall

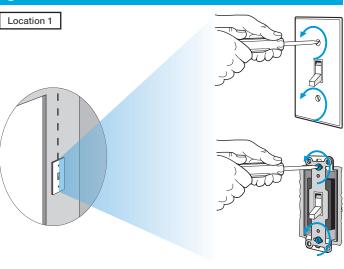

6 Tag and disconnect wires from the existing switch

Location 1

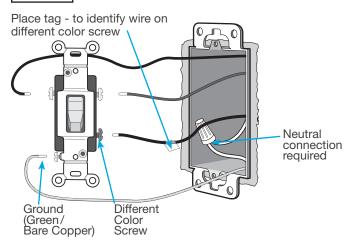



3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Mechanical Toggle Switch (PD-5ANS/PD-6ANS)

10


Location 1

Wallplate

Adapter

Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall switch in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.

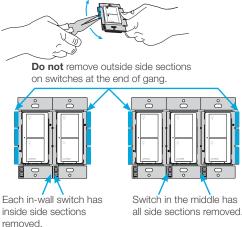


Important note:

Removing side sections reduces the in-wall switch's maximum wattage rating. See the chart below for maximum wattage information.


		88	
PD-5ANS/PD-6ANS (120 V~)1	Δ		Θ
LED	6 A	6 A	5 A
Halogen/incandescent	720 W	720 W	600 W
Electronic Low-Voltage	720 VA	720 VA	600 VA
Magnetic Low-Voltage ²	720 VA	720 VA	600 VA
Fluorescent ³	6 A	6 A	5 A
General Purpose Fan	3.6 A	3.6 A	3.6 A

¹ Neutral required.

- ² The maximum lamp wattage is determined by the efficiency of the transformer, with 70% - 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.
- ³ The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.

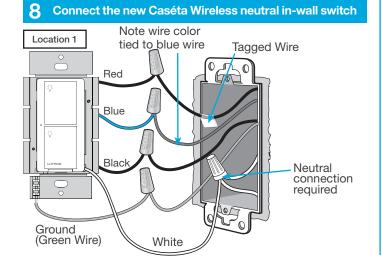


9 Mount the Caséta Wireless in-wall switch

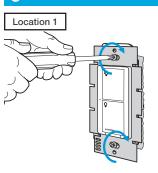


Attach the wallplate

l T


Q

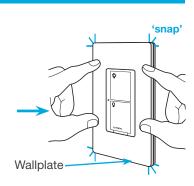

Remove existing toggle switch from wall at Location 2 11

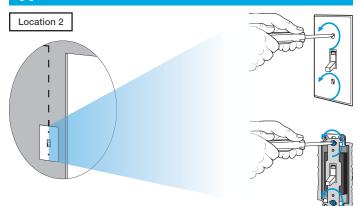

12a Modify wiring for existing toggle switch

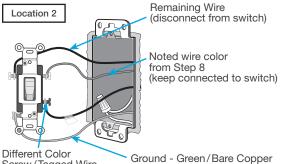


Screw/Tagged Wire (disconnect from switch)

(keep connected to switch)




3-Way Installation - Caséta Wireless In-Wall Neutral Switch with Mechanical Toggle Switch (PD-5ANS/PD-6ANS)

12b Modify wiring for existing toggle switch

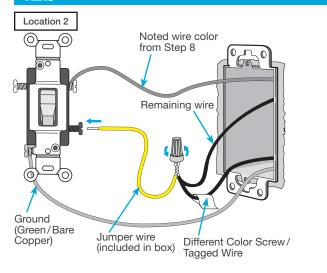




Location 2

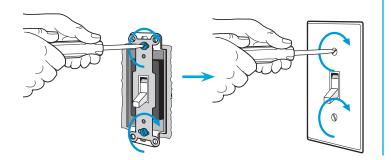


Schematic Diagram

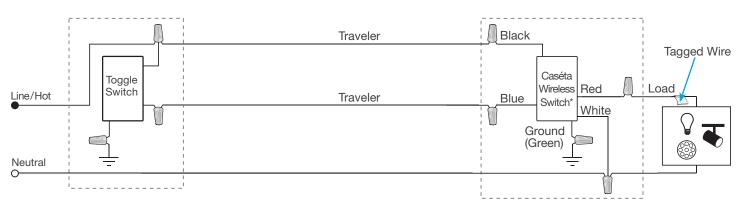

* Switch may be installed in either location.

Note: The red wire must be connected to the load and the black wire must be connected to Line/Hot. The product will not work if the wires are reversed.

14 Turn power on at circuit breaker

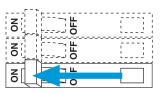


Important note: Pico remote control (optional)

If you would like to pair a Pico remote control to the Caséta Wireless in-wall switch, please follow the procedure described in the quick-start guide that came with your in-wall switch.

LUTRON

<u>Casét</u>a Wireless

Multi-Location Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Controls (PD-6WCL)

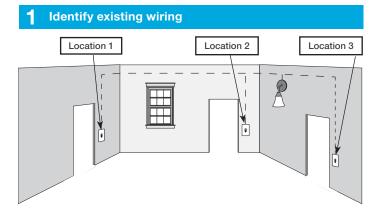

Three or more switches control the lights (multi-location installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If two switches control the lights (3-way installation) See <u>page 3</u> for details

2 What you need for a multi-location installation



In-wall dimmer

PD-6WCL or P-PKG1W





CW-1





Two Pico remote controls with wall-mounting kits PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the lights, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the lights, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your in-wall dimmer (Locations 1 or 3). In this example, we will use Location 1.






3-Way Switch Locations 1 and 3

4-Way Switch Location 2

Turn power off at circuit breaker

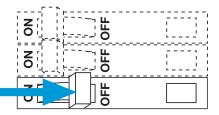




╈


WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

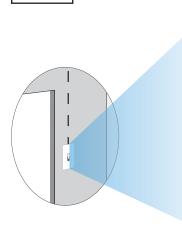



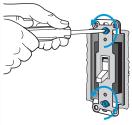




Multi-Location Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Controls (PD-6WCL)

6 Tag and disconnect wires from the existing switch




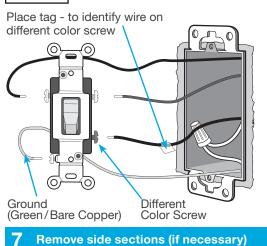

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections on dimmers at the end of gang.

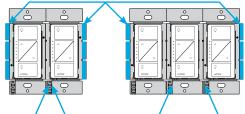

Each in-wall dimmer has inside side sections removed.




Important note:


Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.

			88	BOB
Total Dimmable LED Wattage		Incandescent/Halogen Total Wattage		
		Δ	•	Θ
0 W	+	600 W	500 W	400 W
1 W – 25 W	+	500 W	400 W	300 W
26 W - 50 W	+	400 W	300 W	200 W
51 W – 75 W	+	300 W	200 W	100 W
76 W - 100 W	+	200 W	100 W	50 W
101 W - 125 W	+	100 W	50 W	0 W
126 W - 150 W	+	0 W	0 W	0 W


8 Connect the new Caséta Wireless in-wall dimmer

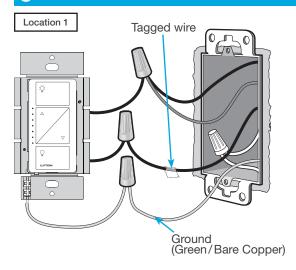


9 Mount the Caséta Wireless in-wall dimmer

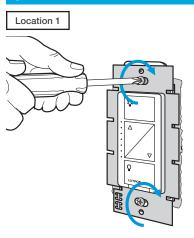

10 Attach the wallplate

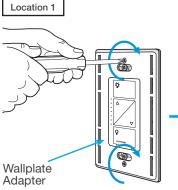

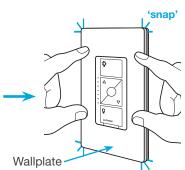


LUTRON

Multi-Location Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Controls (PD-6WCL)







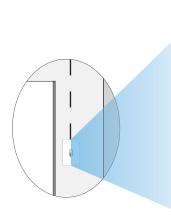



14 Attach the wallplate bracket and Pico remote control

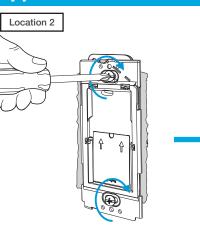

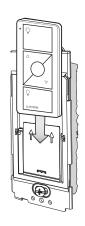


Attach the wallplate 15



Location 2

12


Place tags - to identify wires on different color screws

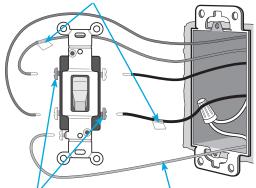


Different Color Screws


Ground (Green/Bare Copper)

13 **Connect the wires**

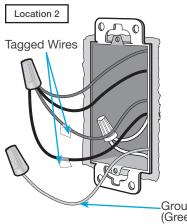



Ground (Green/Bare Copper)

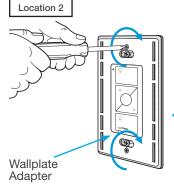


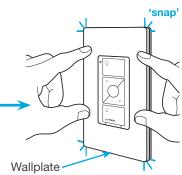

16 Remove existing switch from wall at Location 3

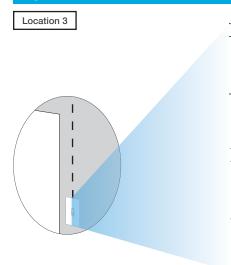

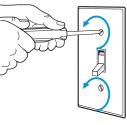


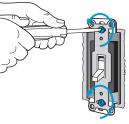




Caséta Wireless Multi-Location Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Controls (PD-6WCL)




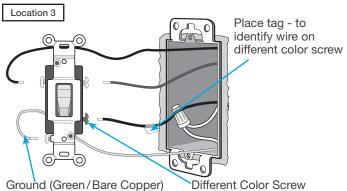


Ground (Green/Bare Copper)


18 **Connect the wires**

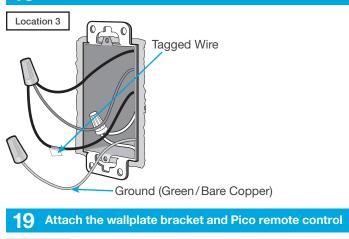

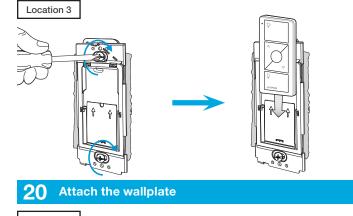

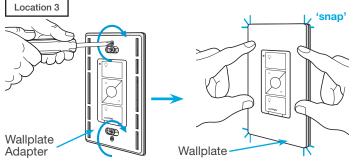


21 Turn power on at circuit breaker

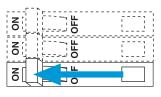


Pairing the in-wall dimmer and Pico remote controls

Press and hold "Off" button on in-wall dimmer 22

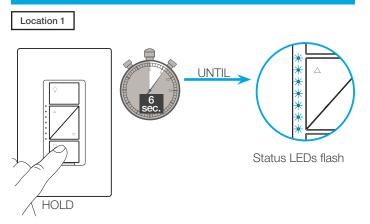



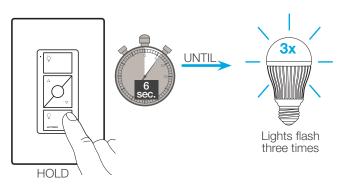


24 Repeat for remote control at Location 3

Repeat steps 22 and 23 to pair remote control at Location 3.



Multi-Location Installation - Caséta Wireless In-Wall Dimmer with Pico Remote Controls (PD-6WCL)

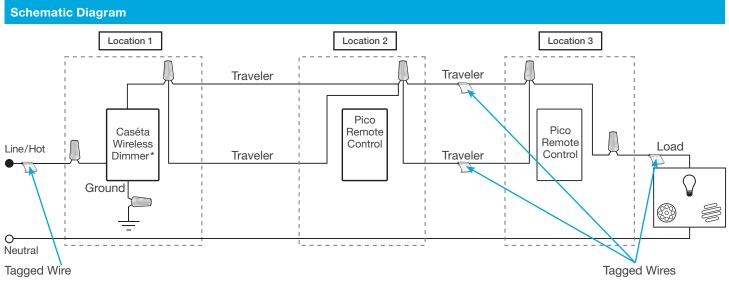

* It is recommended to install in-wall dimmer in either Location 1 or 3.



<u>Casét</u>a Wireless

Multi-Location Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD)

Identify existing wiring Location 1 Location 2 Location 3 Image: Comparison of the second se


Three or more switches control the lights (multi-location installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If two switches control the lights (3-way installation)

See page 11 or page 30 for details

2 What you need for a multi-location installation

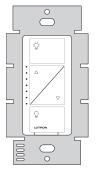



In-wall PRO dimmer PD-10NXD







Two Pico remote controls with wall-mounting kits PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the lights, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the lights, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your in-wall dimmer (Locations 1 or 3). In this example, we will use Location 1.






3-Way Switch Locations 1 and 3

4-Way Switch Location 2

Turn power off at circuit breaker

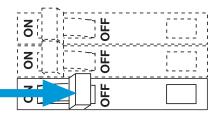





╈


WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

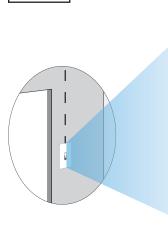

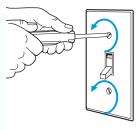

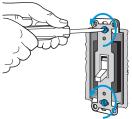


LUTRON

Multi-Location Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD)

6 Tag and disconnect wires from the existing switch



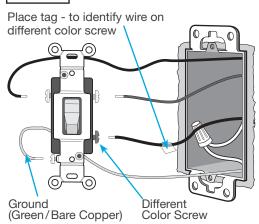


Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections on dimmers at the end of gang.

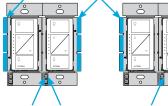

Each in-wall dimmer has inside side sections removed.


Dimmer in the middle has all side sections removed.

Important note:

Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.


Total Dimmable LED Wattage	I	A Incandescent/Hal	B B ogen Total Wattag	
		Ο Ο Ο		
0 W	+	1000 W	800 W	600 W
1 W – 25 W	+	900 W	750 W	550 W
26 W - 50 W	+	800 W	700 W	500 W
51 W – 75 W	+	700 W	600 W	450 W
76 W – 100 W	+	600 W	500 W	400 W
101 W - 125 W	+	500 W	400 W	300 W
126 W - 150 W	+	400 W	300 W	200 W
151 W – 175 W	+	300 W	200 W	100 W
176 W - 200 W	+	200 W	100 W	50 W
201 W - 225 W	+	100 W	50 W	0 W
226 W - 250 W	+	0 W	0 W	0 W

8 Connect the new Caséta Wireless in-wall dimmer

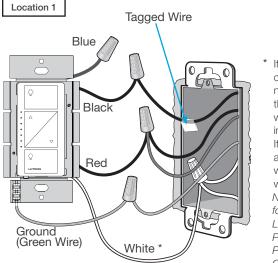


If available, connect the neutral wire from the wallbox to the white wire on the in-wall dimmer. If neutral is not available, cap the white wire with a wire connector. Neutral required for: MLV loads, LED drivers. PHPM-PA, PHPM-3F, GRX-TVI.

9 Mount the Caséta Wireless in-wall dimmer

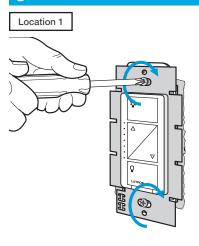

10 Attach the wallplate

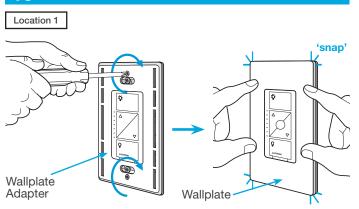




Multi-Location Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD)







12


Location 2

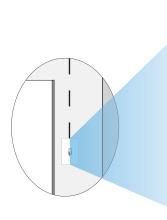

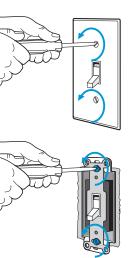

14 Attach the wallplate bracket and Pico remote control

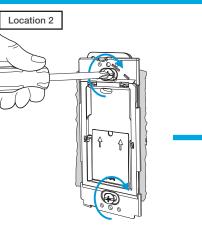

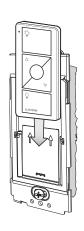


15 Attach the wallplate



Tag and disconnect wires from the existing switch


Place tags - to identify wires on different color screws

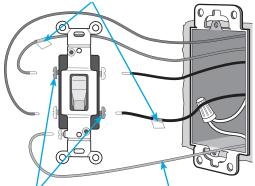


Different Color Screws

Ground (Green/Bare Copper)


13 Connect the wires

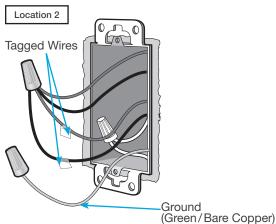



Location 2

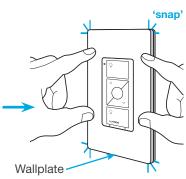

16 Remove existing switch from wall at Location 3

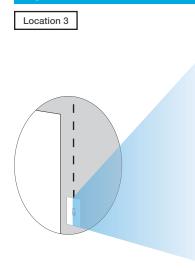

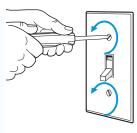

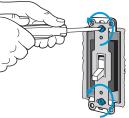

LUTRON

Multi-Location Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD)

Tag and disconnect wires from the existing switch 17 21 Location 3 Place tag - to identify wire on 8 E O 0 different color screw Ë S 0 S Ground (Green/Bare Copper) Different Color Screw 22 18 **Connect the wires** Location 1 Location 3 62° Tagged Wire HOLD Ground (Green/Bare Copper) 19 Attach the wallplate bracket and Pico remote control 23 Location 3 Location 2 Θ 20 Attach the wallplate Location 3 HOLD 'snap' œ Wallplate Adapter Wallplate


LUTRON


Turn power on at circuit breaker




Pairing the in-wall dimmer and Pico remote controls

Press and hold "Off" button on in-wall dimmer

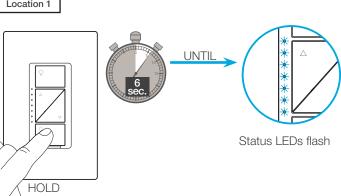

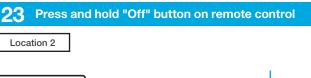

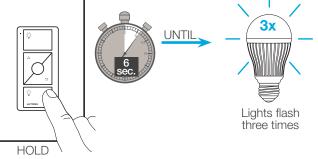


24 Repeat for remote control at Location 3

Repeat steps 22 and 23 to pair remote control at Location 3.



44

Multi-Location Installation - Caséta Wireless In-Wall PRO Dimmer with Pico Remote Controls (PD-10NXD)

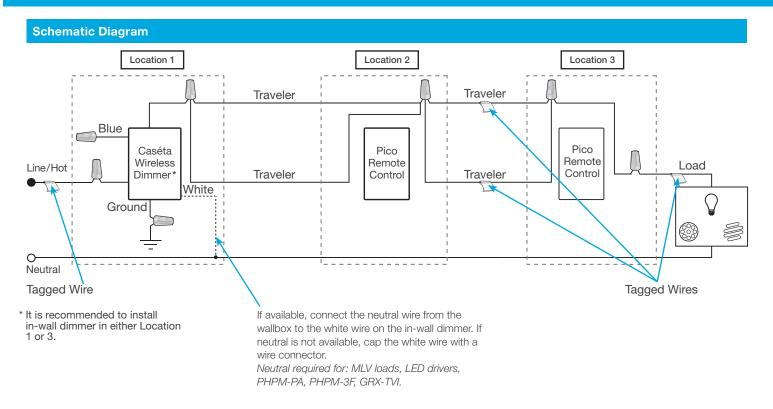



<u>Casét</u>a Wireless

Multi-Location Installation - Caséta Wireless In-Wall Switch with Pico Remote Controls (PD-5WS-DV)

1 Identify existing wiring

Three or more switches control the lights (multi-location installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If two switches control the lights (3-way installation) See page 7 or page 27 for details

2 What you need for a multi-location installation



In-wall switch

PD-5WS-DV

Lime



Two Pico remote controls PJ2-2B




Two Wallplate Brackets PICO-WBX-ADAPT



Three Claro Wallplates CW-1

3 Choose a location for your Caséta Wireless in-wall switch

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the lights, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the lights, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your Caséta Wireless in-wall switch (Locations 1 or 3). In this example, we will use Location 1.

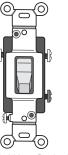




3-Way Switch Locations 1 and 3

4-Way Switch Location 2

4 Turn power off at circuit breaker

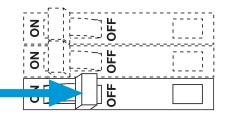





┿


WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

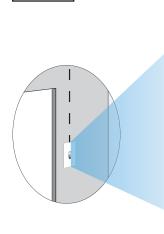

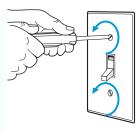

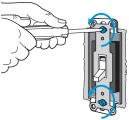




Multi-Location Installation - Caséta Wireless In-Wall Switch with Pico Remote Controls (PD-5WS-DV)

6 Tag and disconnect wires from the existing switch



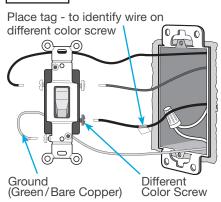


Ganging and De-rating

	Â	88	808
PD-5WS-DV (120 V~)		00	<u> </u>
LED	5 A	4 A	3 A
Halogen/incandescent	600 W	450 W	350 W
Electronic Low-Voltage	600 W	450 W	350 W
Magnetic Low-Voltage 1	600 VA/475 W	450 VA/350 W	350 VA/275 W
Fluorescent ²	5 A	4 A	3 A
General Purpose Fan	3 A	3 A	3 A
PD-5WS-DV (277 V~)	•	6	Θ
LED	5 A	4 A	3 A
Halogen/incandescent	1350 W	1100 W	800 W
Electronic Low-Voltage	1350 W	1100 W	800 W
Magnetic Low-Voltage 1	1350 VA/1075 W	1100 VA/875 W	800 VA/625 W
Fluorescent ²	5 A	4 A	3 A


¹ The maximum lamp wattage is determined by the efficiency of the transformer, with 70% – 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.

² The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.


8 Connect the new Caséta Wireless in-wall switch

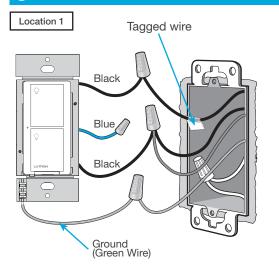

9 Mount the Caséta Wireless in-wall switch

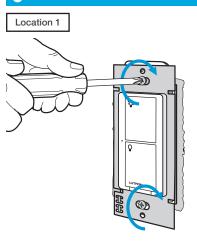

10 Attach the wallplate

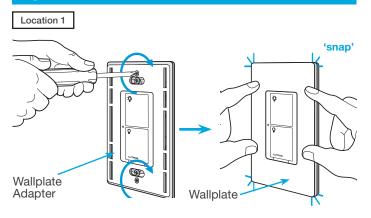





Multi-Location Installation - Caséta Wireless In-Wall Switch with Pico Remote Controls (PD-5WS-DV)






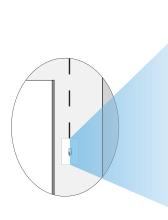

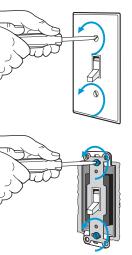


14 Attach the wallplate bracket and Pico remote control

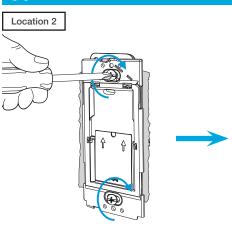






15 Attach the wallplate

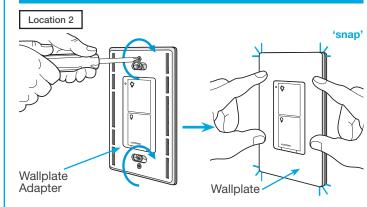

16 Remove existing switch from wall at Location 3

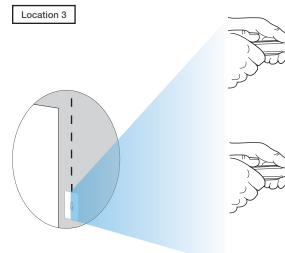

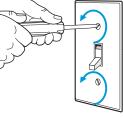


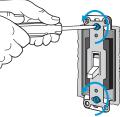

12 Tag and disconnect wires from the existing switch

Location 2


Place tags - to identify wires on different color screws

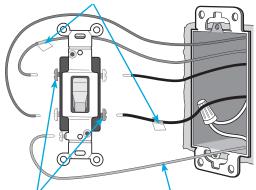

Different Color Screws

Ground (Green/Bare Copper)


13 Connect the wires

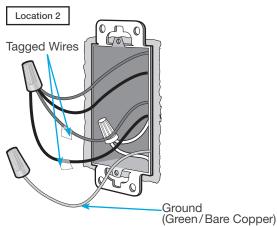




Multi-Location Installation - Caséta Wireless In-Wall Switch with Pico Remote Controls (PD-5WS-DV)

Tag and disconnect wires from the existing switch 17

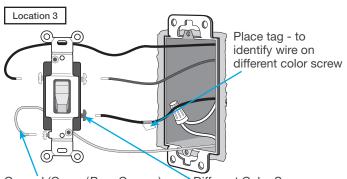


Ground (Green/Bare Copper)

Different Color Screw

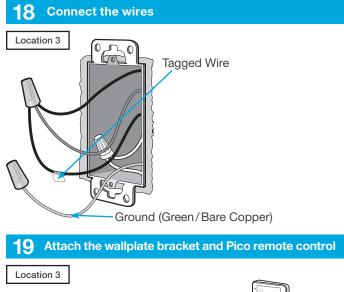


Turn power on at circuit breaker 21

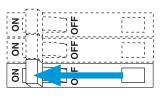


Pairing the in-wall switch and Pico remote controls

Press and hold "Off" button on in-wall switch 22

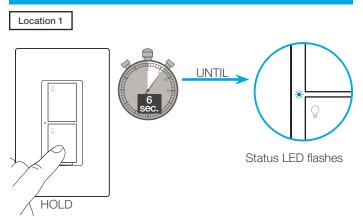




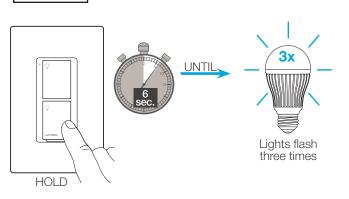


24 Repeat for remote control at Location 3

Repeat steps 22 and 23 to pair remote control at Location 3.



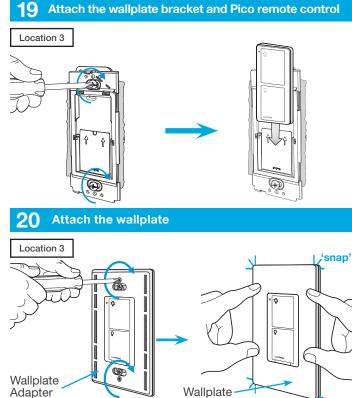

Multi-Location Installation - Caséta Wireless In-Wall Switch with Pico Remote Controls (PD-5WS-DV)

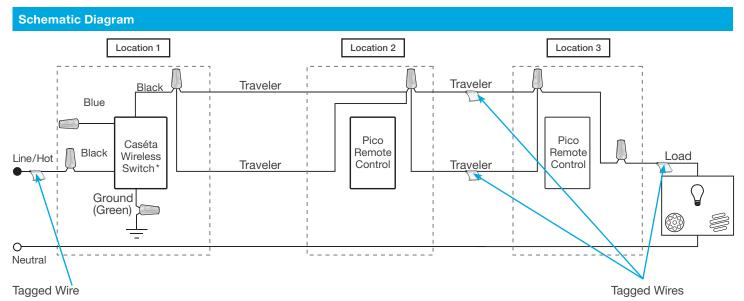

* It is recommended to install in-wall switch in either Location 1 or 3.



Multi-Location Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS)

1 Identify existing wiring

Three or more switches control the lights (multi-location installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your switch
- If two switches control the lights (3-way installation) See page 15 or page 33 for details

2 What you need for a multi-location installation



In-wall switch PD-5ANS/PD-6ANS



Two Pico remote controls PJ2-2B




Two Wallplate Brackets PICO-WBX-ADAPT



Three Claro Wallplates CW-1

3 Choose a location for your Caséta Wireless in-wall switch

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the lights, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the lights, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your Caséta Wireless in-wall switch (Locations 1 or 3). In this example, we will use Location 1.

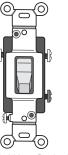




3-Way Switch Locations 1 and 3

4-Way Switch Location 2

4 Turn power off at circuit breaker

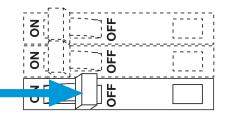





┿


WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

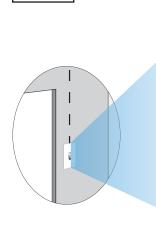

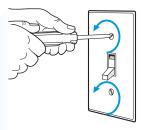


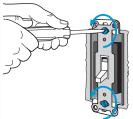

LUTRON

Multi-Location Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS)

6 Tag and disconnect wires from the existing switch

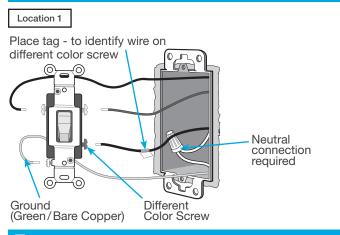



Remove side sections (if necessary)

When installing more than one Caséta Wireless in-wall switch in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections on switches at the end of gang.

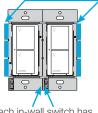

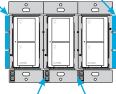

Each in-wall switch has inside side sections removed.

Switch in the middle has all side sections removed.

Important note:


Removing side sections reduces the in-wall switch's maximum wattage rating. See the chart below for maximum wattage information.

		88	BCB
PD-5ANS/PD-6ANS (120 V~)1	۵		G
LED	6 A	6 A	5 A
Halogen/incandescent	720 W	720 W	600 W
Electronic Low-Voltage	720 VA	720 VA	600 VA
Magnetic Low-Voltage ²	720 VA	720 VA	600 VA
Fluorescent ³	6 A	6 A	5 A
General Purpose Fan	3.6 A	3.6 A	3.6 A


¹ Neutral required.

- $^2\,$ The maximum lamp wattage is determined by the efficiency of the transformer, with 70% 85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the in-wall switch.
- ³ The in-wall switch is UL₀ Listed for use with all magnetic and electronic fluorescent ballasts.


8 Connect the new Caséta Wireless in-wall neutral switch

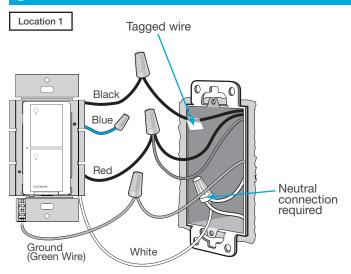

9 Mount the Caséta Wireless neutral in-wall switch

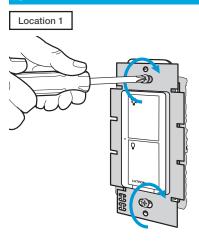

10 Attach the wallplate

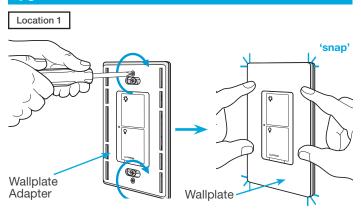



UTRON

Multi-Location Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS)







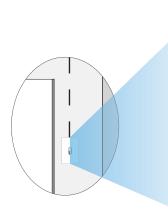

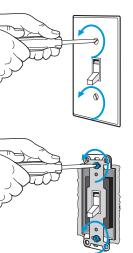


14 Attach the wallplate bracket and Pico remote control

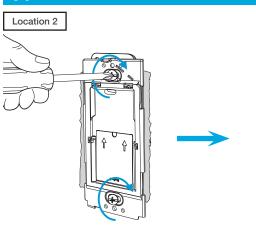


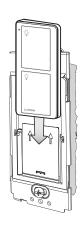



15 Attach the wallplate

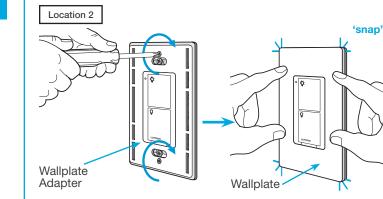

16 Remove existing switch from wall at Location 3

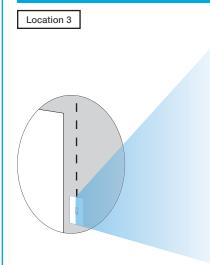

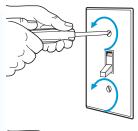

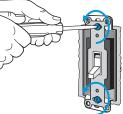


UTRON






Place tags - to identify wires on different color screws

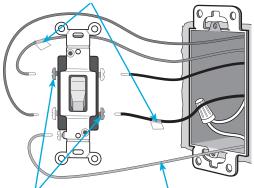

Different Color Screws


Ground (Green/Bare Copper)

13 Connect the wires

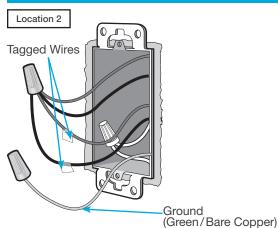


Multi-Location Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS)

Tag and disconnect wires from the existing switch 17

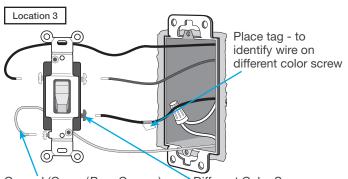


Ground (Green/Bare Copper)

Different Color Screw

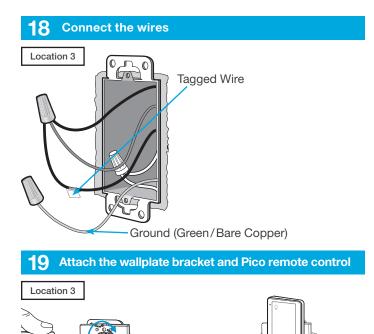


Turn power on at circuit breaker 21

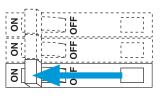

Pairing the in-wall switch and Pico remote controls

Press and hold "Off" button on in-wall switch 22

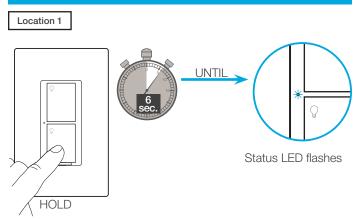






24 Repeat for remote control at Location 3

Repeat steps 22 and 23 to pair remote control at Location 3.




 Θ

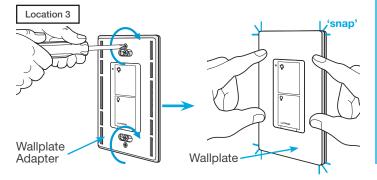



Multi-Location Installation - Caséta Wireless In-Wall Neutral Switch with Pico Remote Controls (PD-5ANS/PD-6ANS)

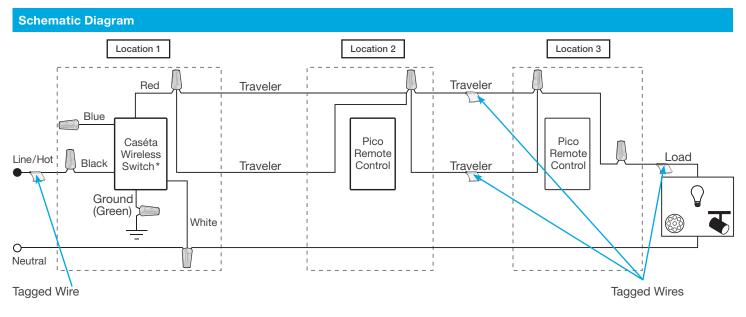

* It is recommended to install in-wall switch in either Location 1 or 3.

Note: The red wire must be connected to the load and the black wire must be connected to Line/Hot. The product will not work if the wires are reversed.



<u>Casét</u>a Wireless

Multi-Location Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE)


Identify existing wiring Location 1 Location 2 Location 3 Image: Contract of the second seco

Three or more switches control the lights (multi-location installation)

Important note:

- If one switch controls the lights (single-pole installation) See quick-start guide that came with your in-wall dimmer
- If two switches control the lights (3-way installation) See page 19 for details

2 What you need for a multi-location installation

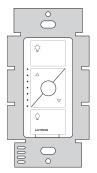



ELV+ in-wall dimmer PD-5NE








Two Pico remote controls with wall-mounting kits PJ2-WALL

3 Choose a location for your Caséta Wireless in-wall dimmer

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the lights, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the lights, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your in-wall dimmer (Locations 1 or 3). In this example, we will use Location 1.

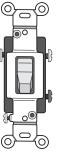




3-Way Switch Locations 1 and 3

4-Way Switch Location 2

4 Turn power off at circuit breaker

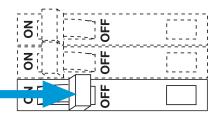




╈


WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

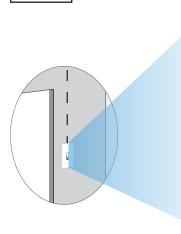




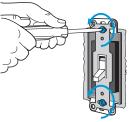



Multi-Location Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE)


6 Tag and disconnect wires from the existing switch

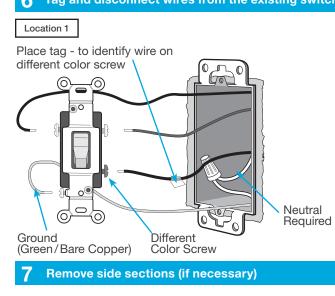

When installing more than one Caséta Wireless in-wall dimmer in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image and chart below for more information.



Do not remove outside side sections on dimmers at the end of gang.

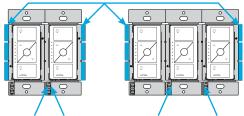

Each in-wall dimmer has inside side sections removed.


Dimmer in the middle has all side sections removed.

Important note:


Removing side sections reduces the in-wall dimmer's maximum wattage rating. See the chart below for maximum wattage information.

	- - -	88	
PD-5NE (120 V~) ¹	Incandescent/I	Halogen Total W B	attage O
LED	250 W	250 W	250 W
Halogen / Incandescent	500 W	400 W	300 W
Electronics Low-Voltage	500 W	400 W	300 W
Magnetic Low Voltage	400 VA	400 VA	400 VA


8 Connect the new Caséta Wireless in-wall dimmer

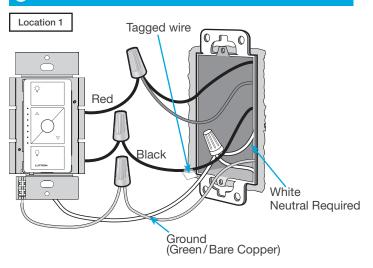

9 Mount the Caséta Wireless in-wall dimmer

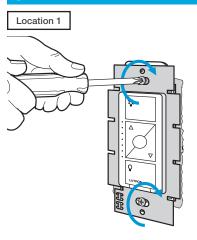

10 Attach the wallplate

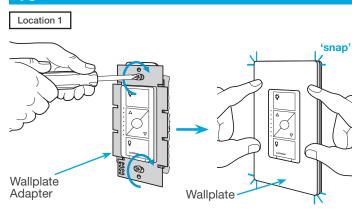




Multi-Location Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE)






12


Location 2

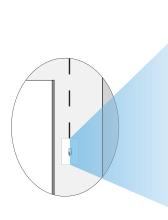




14 Attach the wallplate bracket and Pico remote control

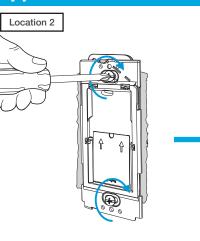


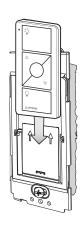


15 Attach the wallplate

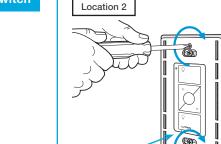



Wallplate Adapter

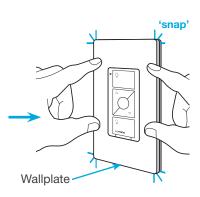

16 Remove existing switch from wall at Location 3

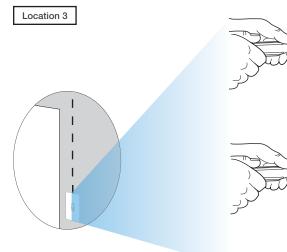


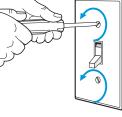

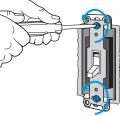

Tag and disconnect wires from the existing switch


Place tags - to identify wires on different color screws

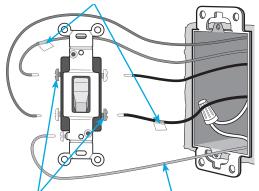

Different Color Screws

Ground (Green/Bare Copper)


13 Connect the wires

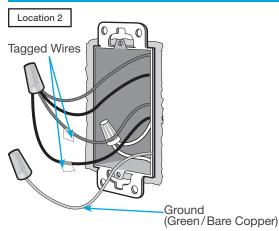



Adapter

Multi-Location Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE)

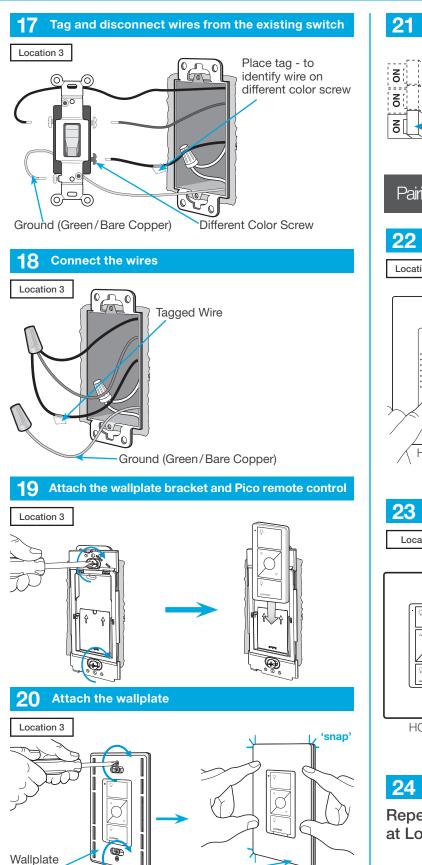


Wallplate

21 Turn power on at circuit breaker




Pairing the in-wall dimmer and Pico remote controls

22 Press and hold "Off" button on in-wall dimmer

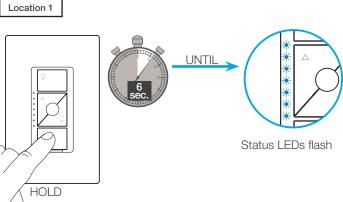

23 Press and hold "Off" button on remote control Location 2

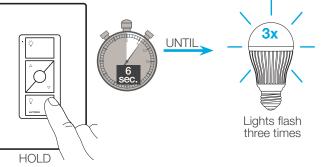


24 Repeat for remote control at Location 3


Repeat steps 22 and 23 to pair remote control at Location 3.



Multi-Location Installation - Caséta Wireless In-Wall ELV+ Dimmer with Pico Remote Controls (PD-5NE)

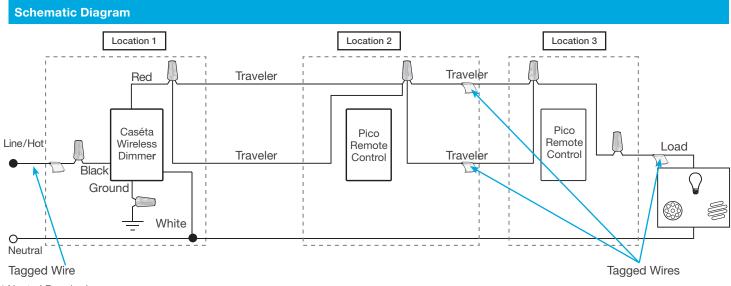


* Neutral Required

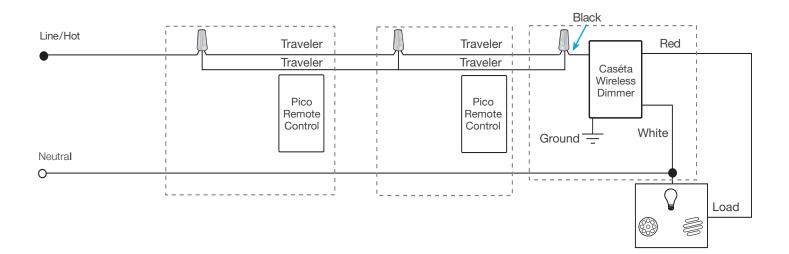



Multi-Location Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Controls (PD-FSQN)

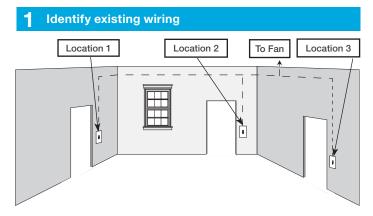


Three or more switches control the fan (multi-location installation)

Important note:

- If one switch controls the fan (single-pole installation) See quick-start guide that came with your fan control
- If two switches control the fan (3-way installation) See page 23 for details

What you need for a multi-location installation

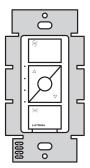





Fan Control PD-FSQN



Two Pico Wallbox Adapters PICO-WBX-ADAPT



CW-1



Three Claro Wallplates

Two Pico Remote Controls for Fans PJ2-3BRL-XXX-F01

3 Choose a location for your Caséta Wireless fan control

NOTE: There will be two different types of existing switches in this application. Locations 1 and 3 will use 3-way switches (three screws which control the fan, plus one ground screw) and Location 2 will use a 4-way switch (four screws which control the fan, plus one ground screw). For easiest installation, we recommend replacing one of the 3-way switches with your fan control (Locations 1 or 3). In this example, we will use Location 1.






3-Way Switch Locations 1 and 3

4-Way Switch Location 2

Turn power off at circuit breaker

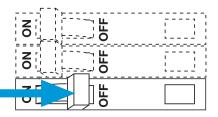





WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

5 Remove existing switch from wall at Location 1

Location 1

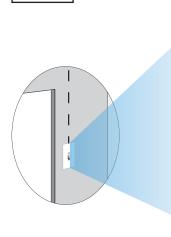




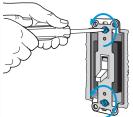

LUTRON

Multi-Location Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Controls (PD-FSQN)


6 Tag and disconnect wires from the existing switch

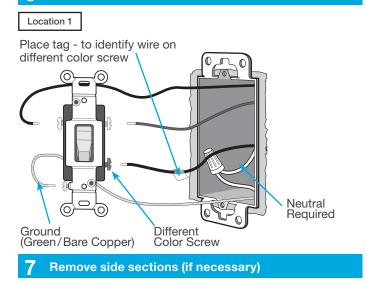

When installing more than one Caséta Wireless control in the same wallbox, it is necessary to remove inner side sections prior to wiring. See image below for more information.




Do not remove outside side sections on the controls at the end of gang.

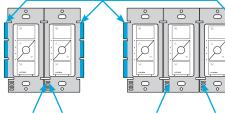

Each control has inside side sections removed.


The control in the middle has all side sections removed.

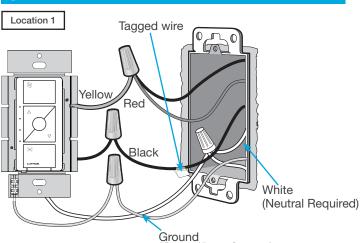


8 Connect the new Caséta Wireless fan control

(Green/Bare Copper)

9 Mount the Caséta Wireless fan control

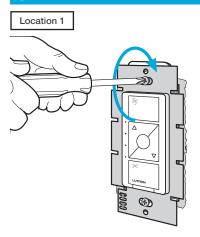

10 Attach the wallplate

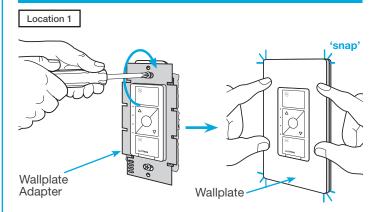





Multi-Location Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Controls (PD-FSQN)







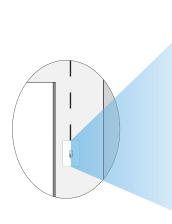

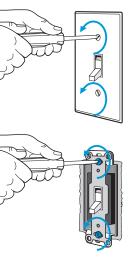


14 Attach the wallplate bracket and Pico remote control

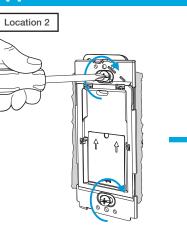


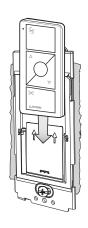


15 Attach the wallplate


Ī

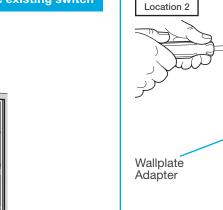


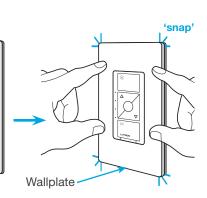

16 Remove existing switch from wall at Location 3

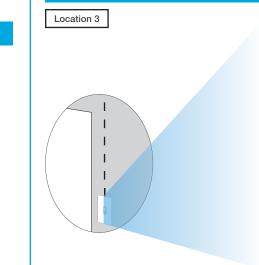

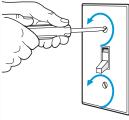

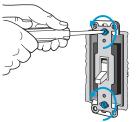


LUTRON



Location 2


Place tags - to identify wires on different color screws

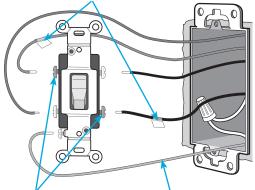

Different Color Screws

Ground (Green/Bare Copper)

13 Connect the wires

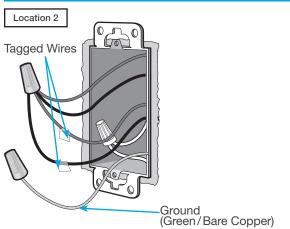


Multi-Location Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Controls (PD-FSQN)

UNTIL

UNTIL


Status LEDs flash

Status LEDs flash

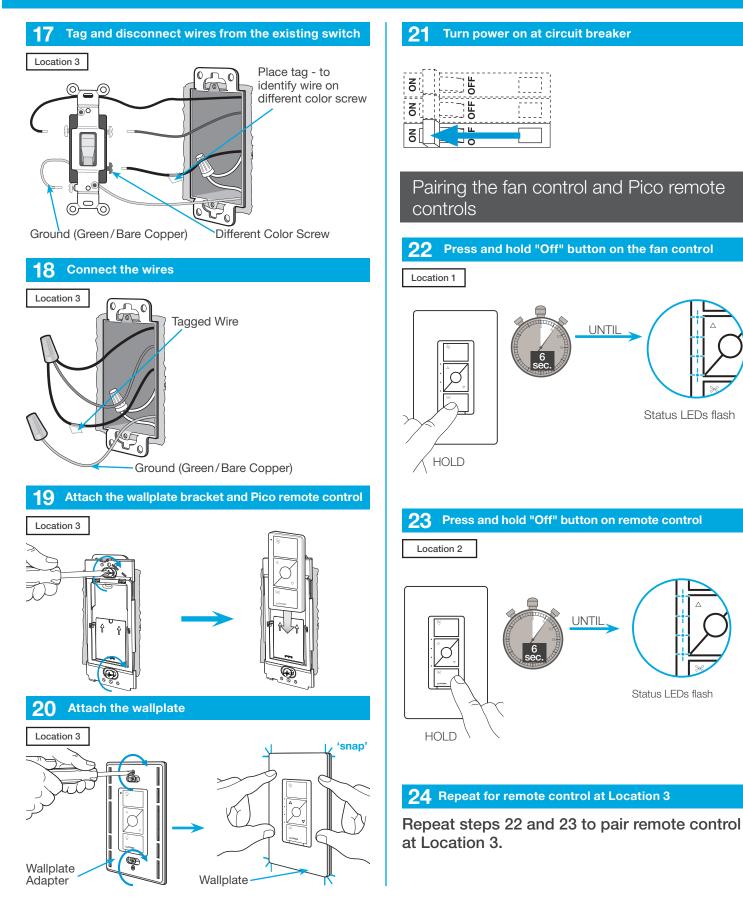




Multi-Location Installation - Caséta Wireless In-Wall Fan Control with Pico Remote Controls (PD-FSQN)

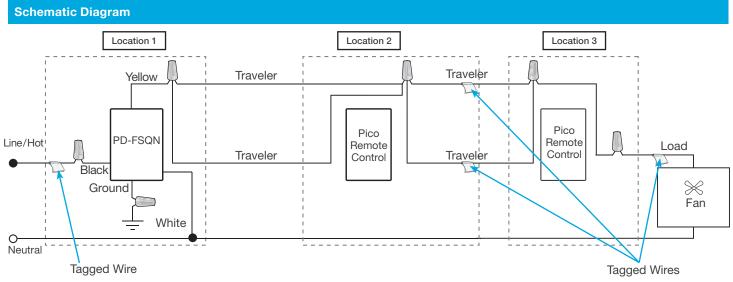



* Neutral Required

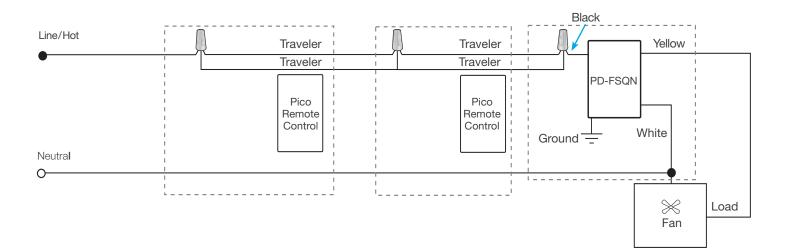




Caséta Wireless Adjusting Low-End Trim on a Caséta Wireless In-Wall Dimmer (PD-6WCL)

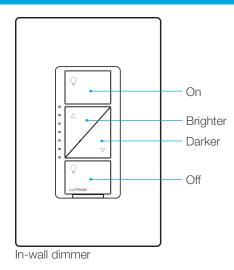

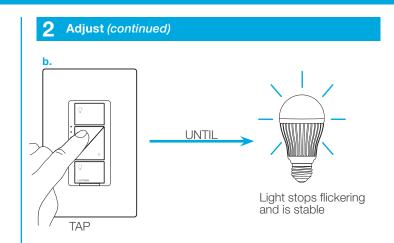


3 Save

Adjusting Low-End Trim -To optimize performance of dimmable LED lamps Enter 1 UNTIL A status LED starts flashing HOLD Adjust UNTIL

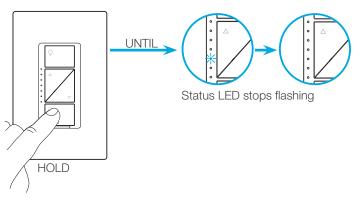


Verify 4


- a. b.
- a. Tap "Off" one time. Light will turn off.
- b. Tap "Brighter" one time. Light will turn on.
- c. If light is still off or is flickering, repeat steps 1-4.

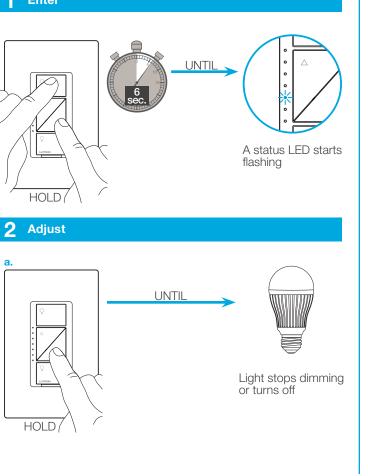




Casé fa Wireless Adjusting High-End Trim on a Caséta Wireless In-Wall Dimmer (PD-6WCL)

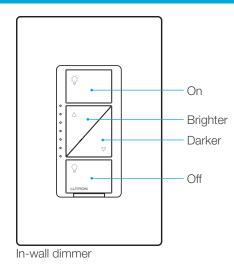


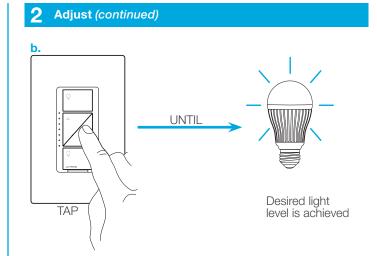

Adjusting High-End Trim -To optimize performance of dimmable LED lamps

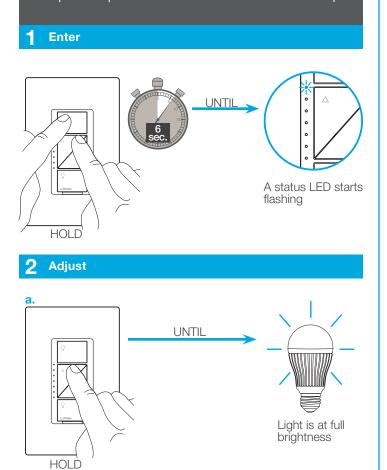



3 Save

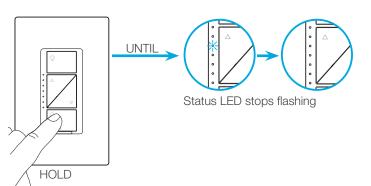




Caséta Wireless Adjusting Low-End Trim on a Caséta Wireless In-Wall PRO Dimmer (PD-10NXD)

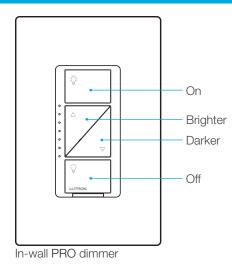

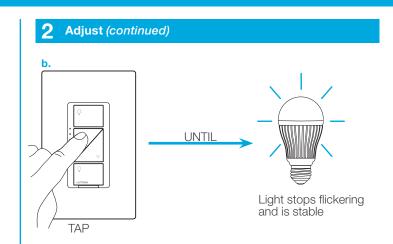


3 Save

Adjusting Low-End Trim -To optimize performance of dimmable LED lamps

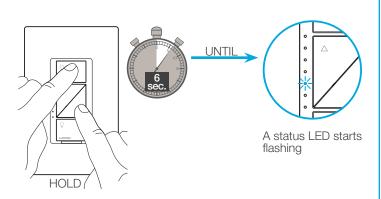


2 Adjust

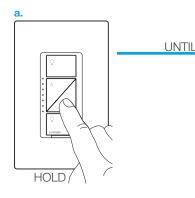



Light stops dimming or turns off

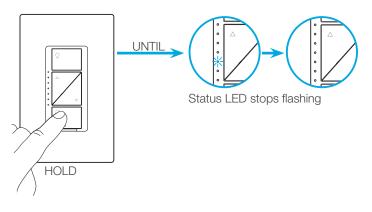



4 Verify

- a.
- a. Tap "Off" one time. Light will turn off.
- **b.** Tap "Brighter" one time. Light will turn on.
- **c.** If light is still off or is flickering, repeat steps 1-4.




Casé fa Wireless Adjusting High-End Trim on a Caséta Wireless In-Wall PRO Dimmer (PD-10NXD)

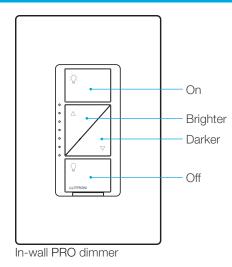


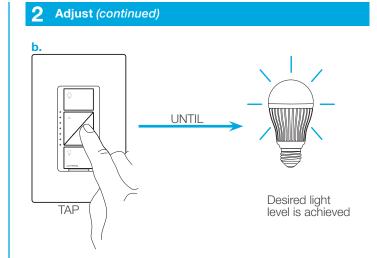

Adjusting High-End Trim -To optimize performance of dimmable LED lamps

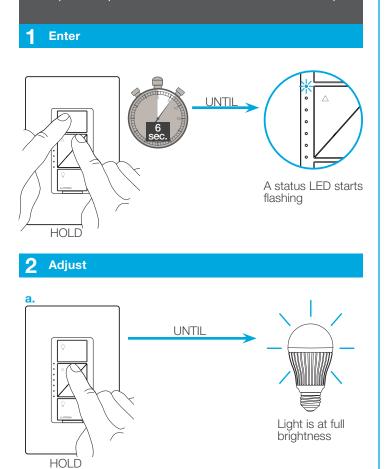



3 Save

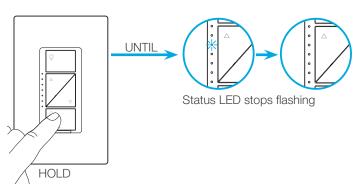



Caséta Wireless Adjusting Low-End Trim on a Caséta Wireless In-Wall ELV+ Dimmer (PD-5NE)

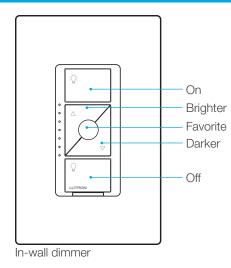

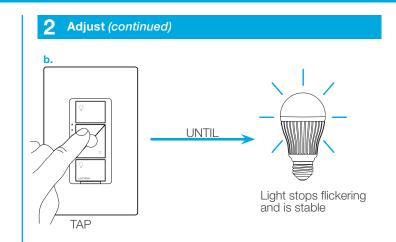



3 Save

Adjusting Low-End Trim -To optimize performance of dimmable LED lamps UNTIL Enter 1 Status LED stops flashing UNTIL HOLD Verify 4 A status LED starts flashing a. a. Tap "Off" one time. Light will turn off. HOLD b. Tap "Brighter" one time. Light (ON AND DARKER) will turn on. Adjust c. If light is still off or is flickering, repeat steps 1-4. UNTIL b. Light stops dimming or turns off HOLD




Caséta Wireless Adjusting High-End Trim on a Caséta Wireless In-Wall ELV+ Dimmer (PD-5NE)

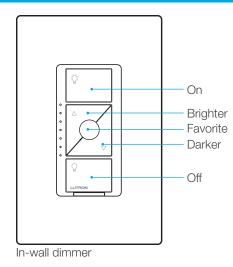


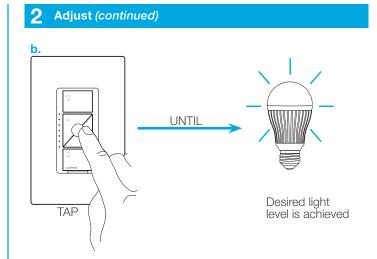

Adjusting High-End Trim -To optimize performance of dimmable LED lamps

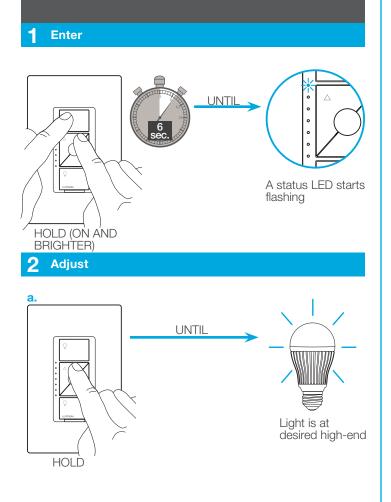


3 Save

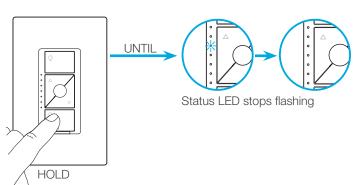




Caséta Wireless Adjusting Low-End Trim on a Caséta Wireless Plug-In Lamp Dimmer (PD-3PCL)

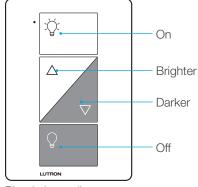

Plug-in lamp dimmer

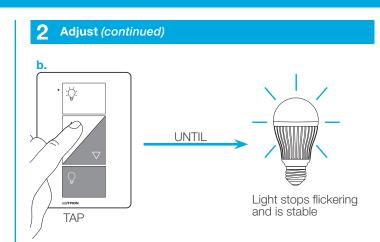



3 Save

To optimize performance of dimmable LED lamps

Adjusting Low-End Trim -


1 Enter

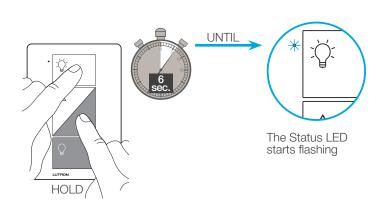

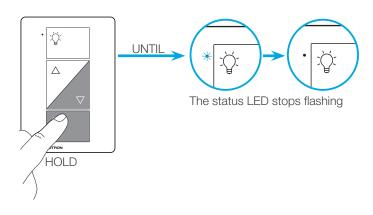


Verify 4

Adjust 2

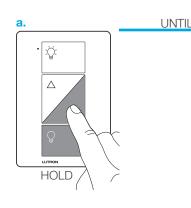




Light stops dimming or turns off

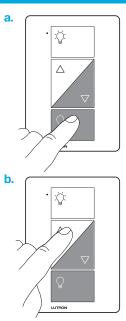

- a. Tap "Off" one time. Light will turn off.
- b. Tap "Brighter" one time. Light will turn on.
- c. If light is still off or is flickering, repeat steps 1-4.



Casé fa Wireless Adjusting High-End Trim on a Caséta Wireless Plug-In Lamp Dimmer (PD-3PCL)

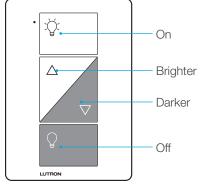


Plug-in lamp dimmer


Adjust (continued) b. Image: Adjust (continued) Description of the second se

Adjusting High-End Trim -To optimize performance of dimmable LED lamps


1 Enter

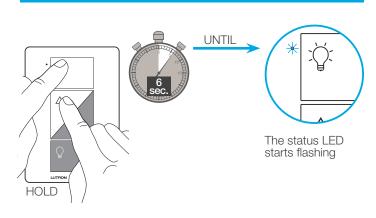

3 Save

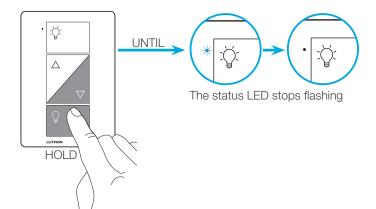


2 Adjust

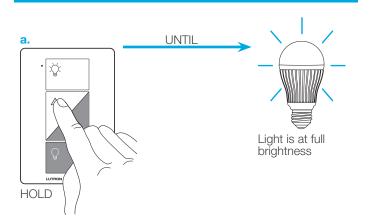





Converting a Caséta Wireless Plug-In Lamp Dimmer to a Switch to Control Non-Dim Loads (PD-3PCL)

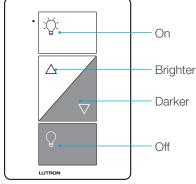

Plug-in lamp dimmer

Press and Hold "On" and "Off" buttons

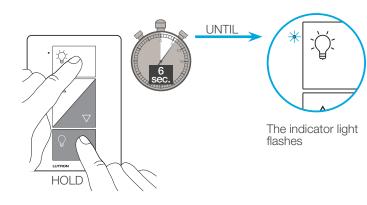

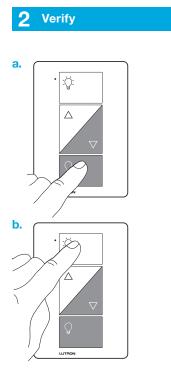


- a. Tap "Off" one time. Light will turn off.
- **b.** Tap "On" one time. Light will turn on.
 - The "Brighter" and "Darker" buttons will be disabled and do nothing.
- **NOTE:** Only use lighting loads on your plug-in lamp dimmer, even when operating in switch mode.

3 To change back to dimmer mode repeat step 1




Caséta Wireless Setting Dimmer Phase on a Caséta Wireless In-Wall ELV+ Dimmer (PD-5NE)

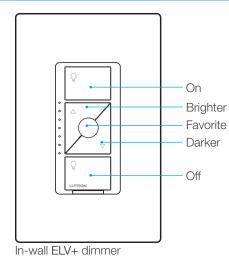





Pull out the FASS Switch and then push back in

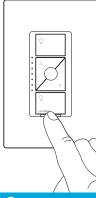


2 Enter

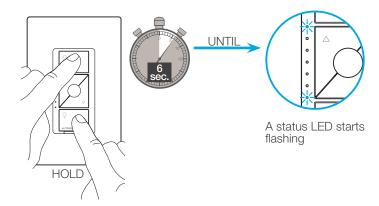

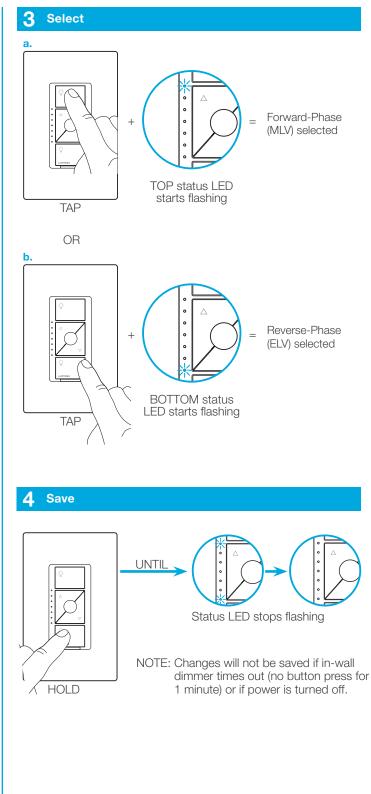




Removing Paired Pico Remote Controls from a Caséta Wireless Dimmer (PD-6WCL/PD-10NXD/PD-5NE/PD-3PCL)

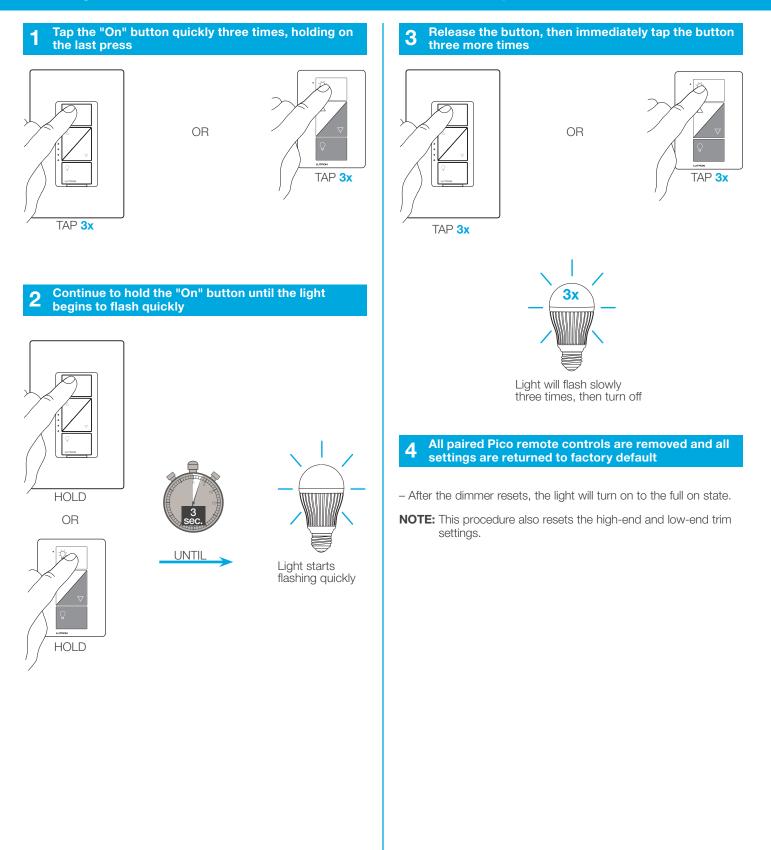




Removing Paired Pico Remote Controls from a Caséta Wireless In-Wall Switch (PD-5WS-DV/PD-6ANS/PD-5ANS)

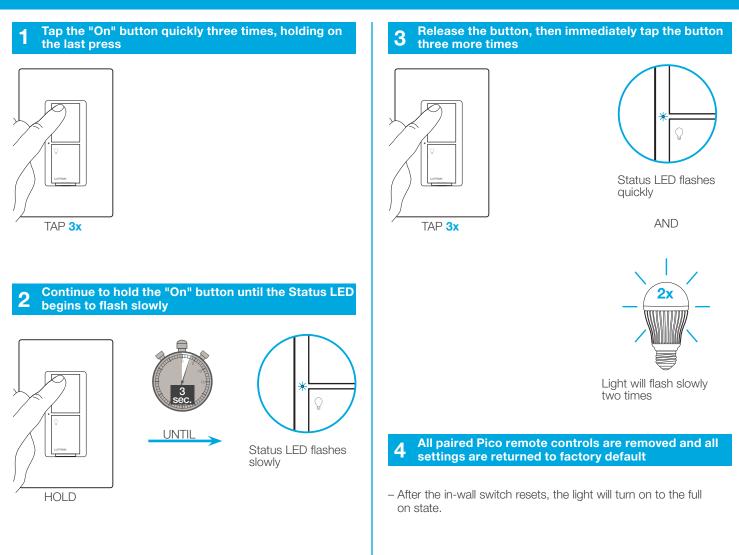




Removing Paired Pico Remote Controls from a Caséta Wireless Fan Control (PD-FSQN)

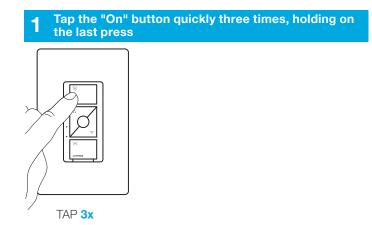

2 Continue to hold the "On" button until the Status LED begins to flash slowly

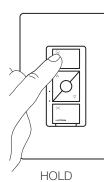





Status LED flashes slowly

3 Release the button, then immediately tap the button three more times



4 All paired Pico remote controls are removed and all settings are returned to factory defaults


- After the in-wall switch resets, the fan will turn on to high.




Caséta Wireless Removing Paired Pico Remote Controls from a Lutron Honeycomb Shade

NOTE: This procedure will remove all paired Pico remote controls and favorite button programming. Upper and lower limits are retained.


Tap the "Shade" button quickly three times, holding on the last press.

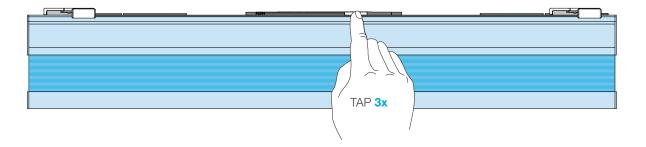


2 Continue to hold the "Shade" button until the button LED flashes green.

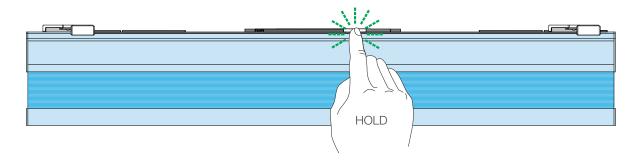

3 Release the "Shade" button, then immediately tap the button three more times.

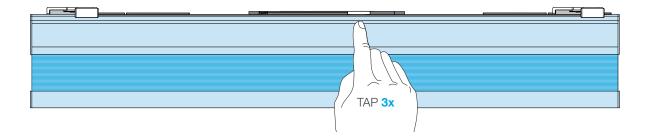

NOTE: The "Shade" button LED will flash GREEN-then-RED three times, signaling the successful completion of the procedure.

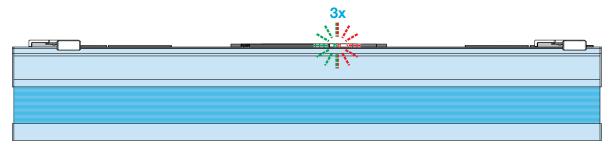





Roller Shades with a Single-Button (Battery-Powered and Plug-In)

NOTE: This procedure will remove all paired Pico remote controls and favorite button programming. Upper and lower limits are retained.


1 Tap the "Shade" button quickly three times, holding on the last press.

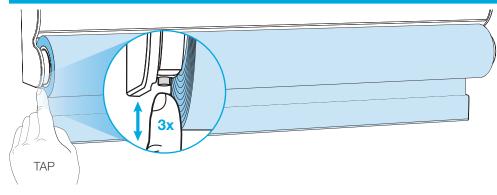


2 Continue to hold the "Shade" button until the button LED flashes green.

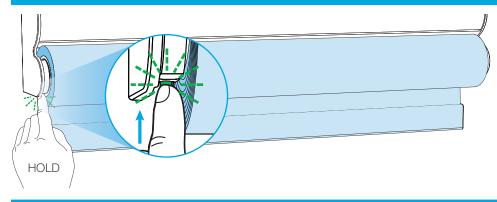

3 Release the "Shade" button, then immediately tap the button three more times.

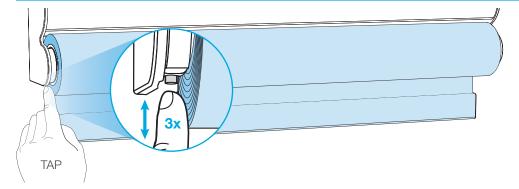


NOTE: The "Shade" button LED will flash GREEN-then-RED three times, signaling the successful completion of the procedure.

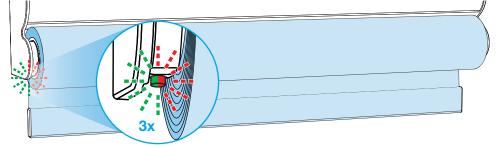



Caséta Wireless Changing the Favorite Light Level on a Pico Remote Control

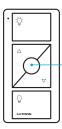


Favorite

You can use the round "Favorite" button on a Pico remote control to recall a favorite light level. We've set it to 50%, but you can change it to any level you like.


1 Set desired light level on a dimmer that has already been paired with a remote control

or

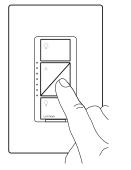



2 Save favorite light level

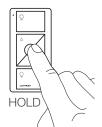






or




Dimmer LED(s) flash(es) two times

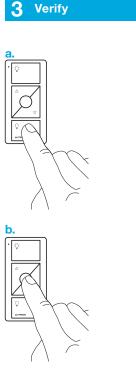

- a. Tap "Off" button one time on remote control. Light will turn off.
- b. Tap "Favorite" button one time on remote control. Light will turn on to the newly saved level.




Casé fa Wireless Changing the Favorite Light Level on a Caséta Wireless In-wall ELV+ Dimmer (PD-5NE)

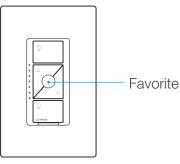


You can use the round "Favorite" button on the in-wall dimmer to recall a favorite light level. We've set it to 50%, but you can change it to any level you like.


Set the desired light level on the in-wall dimmer

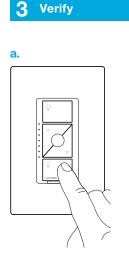


- a. Tap "Off" button one time on in-wall dimmer control. Light will turn off.
- b. Tap "Favorite" button one time on in-wall dimmer control.
 Light will turn on to the newly saved level.

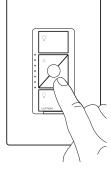

Use the "Brighter" or "Darker" buttons to adjust lights to your favorite level.

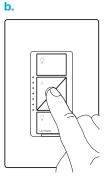


2 Save favorite light level

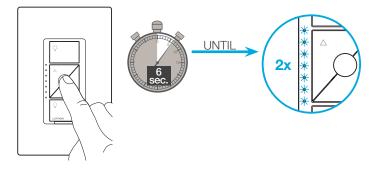

Hold the round "Favorite" button.




Caséta Wireless Changing the Favorite Fan Speed on a Caséta Wireless In-wall Fan Control (PD-FSQN)

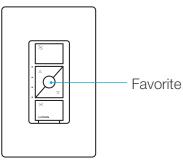


You can use the round "Favorite" button on the fan control to recall a favorite fan speed setting. We've set it to the medium fan speed, but you can change it to any level you like.

٢ Set the desired fan speed on the fan control

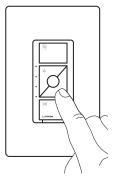

Use the "Faster" or "Slower" buttons to adjust lights to your favorite level.


2 Save favorite fan speed

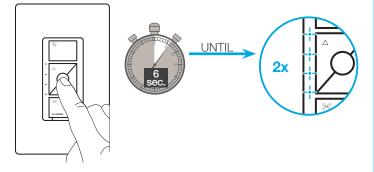


Hold the round "Favorite" button.

3 Verify



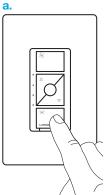

b.

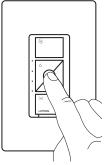

- a. Tap "Off" button one time on fan control. Fan will turn off.
- b. Tap "Favorite" button one time on fan control. Fan will turn on to the newly saved setting.




Identify load type



The LUT-MLC load adapter is provided to help ensure proper operation of the in-wall switch with LED, fluorescent, and ELV lighting loads. When controlling one of these load types, a LUT-MLC may be required, especially at lower wattages. If the status LED on the in-wall switch is flashing or a solid red color, a LUT-MLC must be installed. It is recommended to install a LUT-MLC with these load types regardless of wattage to guarantee best performance.

2 Turn power off at circuit breaker

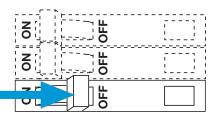



WARNING! Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.

3 Choose installation location


The LUT-MLC must be connected to the neutral and switched hot feed to the load. Install the LUT-MLC inside a load fixture or in a separate junction box within the circuit.

4 Installing the LUT-MLC in a load fixture or junction box

1. Connect one lead of the LUT-MLC to the neutral (white) wire. 2. Connect the other lead of the LUT-MLC to the switched hot

(black) wire.

Junction Box

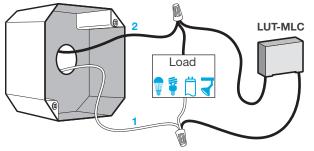

5 Turn power on at circuit breaker


NO	н Н Н Н Н	
8 N	0EF	
8		

6 Verify performance

Verify that the LED on the in-wall switch is not flashing or solid red color and that the load stays off when the in-wall switch is turned off. In rare instances, some loads may still flicker or glow in the off state with the LUT-MLC installed. If this occurs, a different load may be required or additional LUT-MLC load adapters may need to installed.



Caséta Wireless Motion Sensor Placement and Coverage

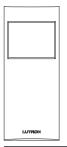

Before mounting the sensor, please note the following:

- If you cannot see the sensor, it cannot see you.
- The sensor should be mounted at eye level. Recommended placement height 6 ft to 8 ft (1.8 m to 2.4 m).
- DO NOT place the sensor within 4 ft (1.2 m) of moving air currents (e.g., HVAC vents), heat sources (e.g., light bulbs, or microwave/standard ovens), or within 6 in (15 cm) of other RF devices.
- The sensor must have an unobstructed view of the room.
 DO NOT place behind or near tall cabinets, shelves, hanging fixtures, or anything that may obstruct sensor's view. The sensor cannot detect occupants through glass objects such as patio or shower doors.
- If there is line of sight from the sensor to the associated devices (no obstructions), sensor can be located within 60 ft (18.3 m) otherwise sensor must be within 30 ft (9.1 m).
- Whenever possible, avoid placing the sensor in a location where it has a broad view outside the intended space.


Testing Sensor Coverage

Test the sensor coverage using the temporary mounting 3M™ Command™ adhesive strip and test procedure below to ensure the sensor will perform as desired prior to permanent mounting.

Sensor Coverage


 $\begin{array}{l} \mbox{Minor Motion Coverage-} \ \mbox{(small movement, i.e., turning a page)} \\ 15 \ \mbox{X } 2 \ \mbox{X } 35{=} \ 1050 \ \mbox{ft}^2 \ \mbox{(97.5 } m^2) \end{array}$


Major Motion Coverage- (large movement, i.e., walking) 20 X 2 X 45= 1800 ft² (167.2 m²)

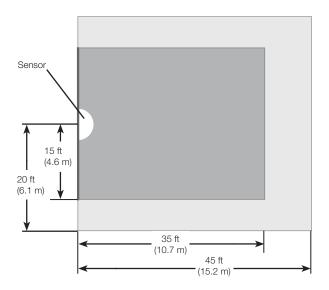

1 Temporary Mounting

To test sensor coverage, a $3M_{\rm TM}$ Command_{TM} adhesive strip is provided for temporarily mounting the sensor. The strip is not reusable and should not be used for permanently mounting the sensor.

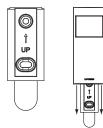

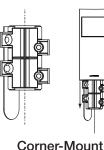

Flat Wall-Mount

2 Enter test mode

Press and release the "Test" button on the top of the sensor. The lens will glow briefly, indicating the test mode has been entered. There is a 90 second warm-up period after the battery is installed before test mode can activated. If the "Test" button is pressed within 90 seconds of installing the battery the lens will flash rapidly until the warm-up is complete.



3 Walk around the space

Walk around the space while observing the lens. If the lens glows, motion is detected. If you are not satisfied with the sensor's performance, relocate the sensor and repeat the test.

4 Exit test mode

Press and release the "Test" button again to exit test mode. The sensor will automatically exit test mode after 15 minutes, or after 5 minutes if no motion is detected.




Motion Sensor Placement Examples

Below and on the next few pages are examples of different spaces to place your motion sensor. Every home layout is different and these examples should only be used as a guideline.


Powder Room

A Caséta Wireless motion sensor is mounted in the corner at the height of 6 ft (1.8 m) where it can "see" the whole room. The placement of the sensor ensures that it won't see any movement outside of the powder room. The sensor is paired to a Caséta Wireless in-wall switch. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the powder room.

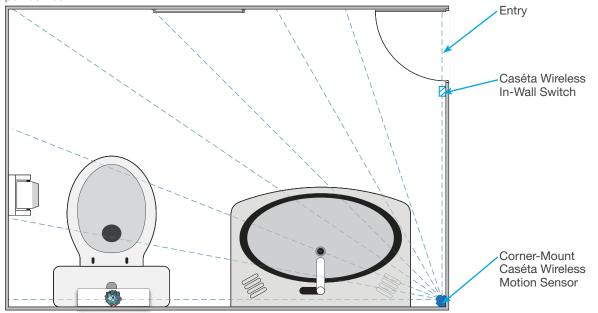

2 Laundry Room


A Caséta Wireless motion sensor is mounted flat on the wall at the height of 6 ft (1.8 m) where it can "see" the whole room. The placement of the sensor ensures that it won't see any movement outside of the laundry room. The sensor is paired to a Caséta Wireless in-wall switch. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the laundry room.

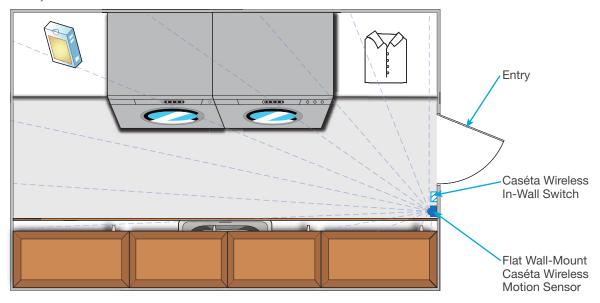



3 Kitchen

A Caséta Wireless motion sensor is mounted flat on the wall at the height of 6 ft (1.8 m) where it can "see" the whole room*. The placement of the sensor ensures that it won't see any movement outside of the kitchen, nor can the sensor see movement through the glass window. The sensor is paired to a Caséta Wireless in-wall dimmer allowing the user to adjust the brightness of the light. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the kitchen.

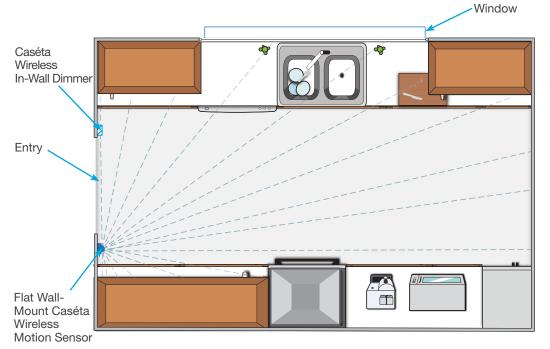


* DO NOT place sensor within 4 ft (1.2 m) of moving air currents (e.g., HVAC vents), heat source (e.g., light bulbs or microwave/ standard ovens). Heat from an oven may cause sensor to see movement. Changing the activity setting to medium- or high-activity may be necessary. Refer to the back of the sensor or visit:

www.casetawireless.com/sensorfeatures

4 Foyer


A Caséta Wireless motion sensor is mounted flat on the wall at the height of 6 ft (1.8 m) where it can "see" the whole room. The placement of the sensor ensures that it won't see any movement outside of the room, nor can the sensor see movement through the glass window. The sensor and Pico wireless control are paired to a Caséta Wireless in-wall dimmer allowing the user to adjust the brightness of the light in the foyer. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the foyer.

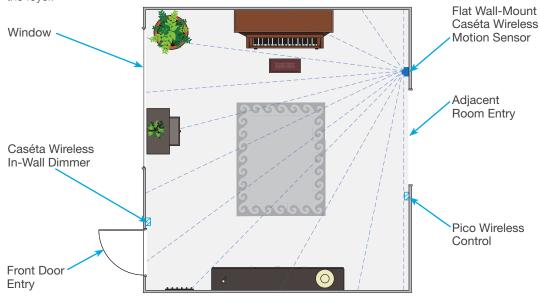




5 Bedroom

A Caséta Wireless motion sensor is mounted flat on the wall near the Caséta Wireless in-wall dimmer at the height of 6 ft (1.8 m) where it can "see" the whole room. The placement of the sensor ensures that it won't see any movement outside of the bedroom. The sensor is paired to a Caséta Wireless in-wall dimmer allowing the user to adjust the brightness of the bedroom light. The Auto-On setting is set to "Disabled", requiring the light to be turned on manually, but allowing for the sensor to automatically turn the light Off. This setting is recommended for bedrooms so the sensor won't turn on the lights when it sees movement while a person is sleeping.

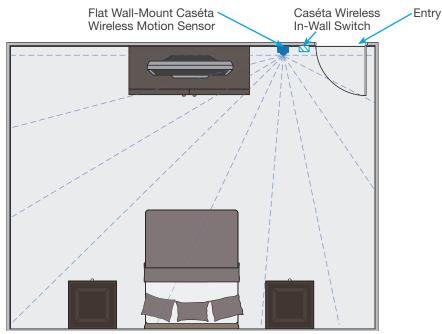

6 Closet


A Caséta Wireless motion sensor is mounted flat on the wall at the height of 6 ft (1.8 m) where it can "see" the walking path of the closet. The placement of the sensor ensures that it won't see any movement outside of the closet. The sensor is paired to a Caséta Wireless in-wall switch. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the closet.

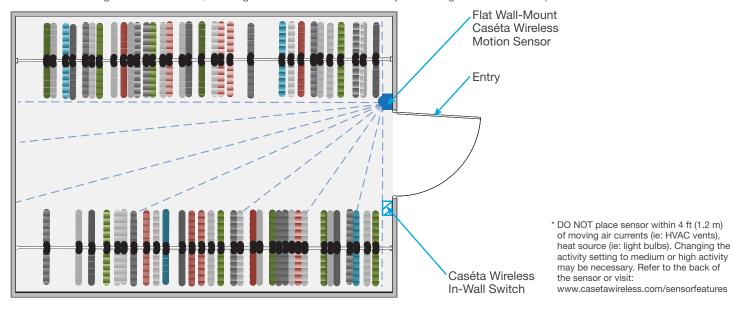

LUTRON


7 Garage

A Caséta Wireless motion sensor is mounted in the corner at the height of 6 ft (1.8 m) and a second Caséta Wireless motion sensor is mounted offset to the wall. This allows for full coverage of the garage. While the corner sensor may be enough to cover the whole garage, if there are objects on the wall blocking the line of sight of the sensor, the placement of the second sensor will ensure full coverage. Both sensors are paired to one Caséta Wireless in-wall switch. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the garage.

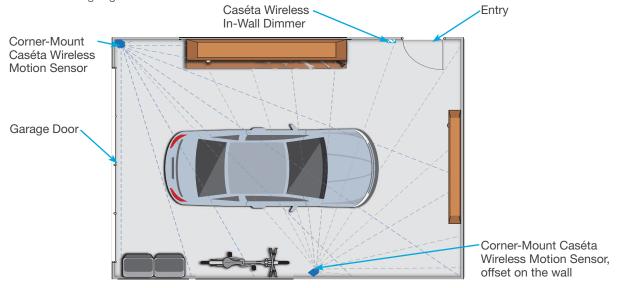

8 Basement/Stairway


A Caséta Wireless motion sensor is mounted in the corner of the stairs ensuring it will see movement at the top of the stairs as well as at the bottom. The sensor and a Pico wireless control are paired to a Caséta Wireless in-wall switch that controls the light in the stairwell. The second motion sensor is placed to ensure coverage of the whole basement. The second sensor is paired to a Caséta Wireless in-wall dimmer allowing you to adjust the brightness of the basement light. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the basement.

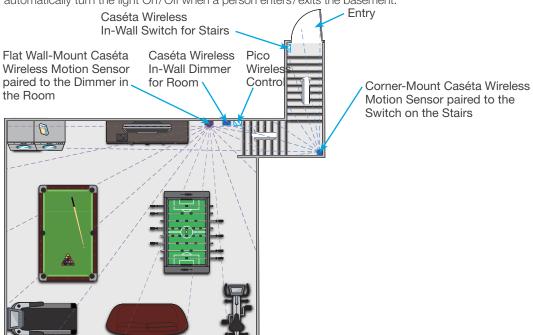




9 Hallway

A Caséta Wireless motion sensor is mounted flat on the wall near the Caséta Wireless in-wall switch at the height of 6 ft (1.8 m) where it can "see" the whole hallway. The sensor may see movement in the rooms if the doors are open. Adjusting sensor location may be necessary based on layout. The sensor is paired to Caséta Wireless in-wall switch. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the hallway.

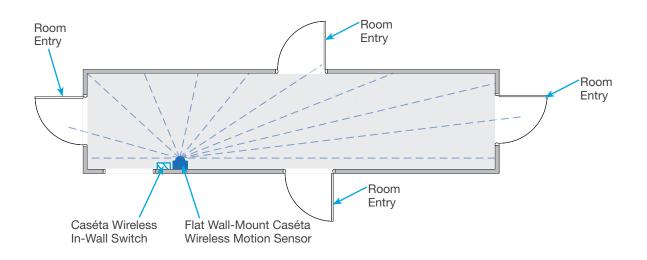


10 Staircase

A Caséta Wireless motion sensor is mounted flat on the ceiling, perpendicular to the staircase. If there is a railing present (or one side of staircase is open to an adjacent area as shown below), align the top of the sensor with the railing (or edge of adjacent area), and the bottom of the sensor facing the wall, so the sensor only "sees" the staircase and not the adjacent area. The sensor and Pico wireless control with wallplate are paired to a Caséta Wireless in-wall switch that controls the light in the staircase. The Auto-On setting is set to "Enabled", allowing for the sensor to automatically turn the light On/Off when a person enters/exits the staircase.

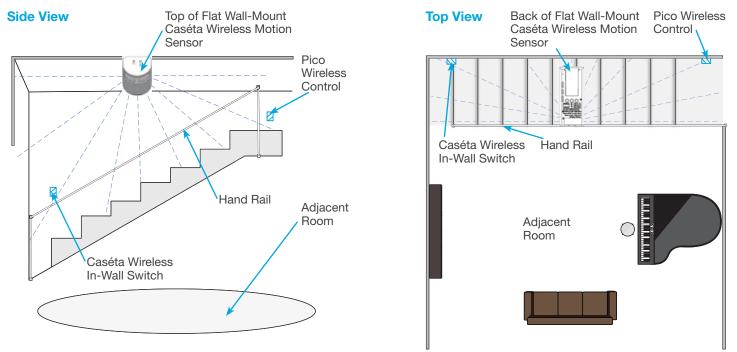



Caséta Wireless Motion Sensor Advanced Features

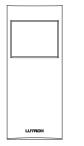

Change Settings: • Hold button until LED blinks • Press button to choose setting • Hold button until LED turns solid Timeout Activity | Auto-On O 30 min # Enabled O 15 min \$ Disabled © 5 min \$ Disabled © 0 0 0

The motion sensor has several advanced set-up features. For the majority of installations, the default settings will provide the best performance and you will not need to utilize the advanced set-up. The motion sensor has three adjustable advanced set-up modes: Timeout, Activity, and Auto-On.

Timeout

The sensor will turn the lights off if no motion occurs for the duration of the timeout period. The available timeout settings are: 1, 5, 15, and 30 minutes. (Default: 15 minutes)

2 Activity

The sensitivity of the sensor can be adjusted based on the expected level of activity within the room. There are three available activity settings: Low Activity, Medium Activity, and High Activity. (Default: Low Activity)

- **Low Activity:** This is the most sensitive setting and is recommended for most applications.
- Medium Activity*: This setting is slightly less sensitive than the Low Activity setting and can be used for spaces that experience normal activity.
- **High Activity*:** This is the least sensitive setting and can be used for spaces that will generally only experience large motions, such as foot traffic.
- * If the sensor is placed near external noise sources such as HVAC vents, it might turn the lights on without occupancy or keep lights on too long after vacancy. If this occurs, change the sensitivity to Medium or High Activity.

3 Auto-On (PD-OSENS model only)

The automatic-on functionality of the sensor can be adjusted to control how the lights respond upon initial occupancy. There are two available settings: Enabled and Disabled. **(Default: Enabled)**

- Enabled: The lights will always turn on automatically on occupancy and automatically turn off after vacancy. Also known as occupancy mode.
- **Disabled:** The lights will not turn on automatically on occupancy, but will still turn off automatically after vacancy. After the lights turn off, a 15 second grace period allows for lights to turn back on if motion is detected. This is also known as vacancy mode.

Recommendations: For applications in bedrooms or when pets are in the space, it's suggested to change Auto-on setting to Disabled.

4 Off While Occupied

When the load control is manually turned OFF, the sensor will not turn the lights back ON automatically while the room is occupied. Once the room is vacated, the Auto-On feature returns to normal operation after the timeout period has expired. (Feature only available when Auto-On is enabled).

5 Advanced Feature Set-Up (optional)

The Advanced Feature set-up is accessed by using the buttons on the back of the sensor. The procedure for selecting a 1-minute timeout is different and described below.

Check Setting: Press and release the button beneath the desired mode. An LED will illuminate briefly to indicate the current setting.

Change Setting: The setting for Timeout, Activity, and Auto-On can be changed using the standard procedure below.

Standard Mode

- 1. Press and hold the desired button until the LED corresponding to the current setting begins flashing rapidly.
- 2. Press and release the button to increment the mode to the next available setting.
- **3.** To save the selected setting, press and hold the button until the LED turns on solid.

1-Minute Timeout (For use in areas that experience brief activity; hallways, laundry rooms, etc.)

- **1.** Press and hold the timeout button for 10 seconds until all 3 LEDs begin flashing rapidly.
- 2. Press and hold the timeout button until all 3 LEDs turn on solid, indicating the 1-minute timeout has been saved.



Caséta Wireless Dimmer and Switch Troubleshooting

Symptoms	Probable cause and action	
Light does not turn on or LEDs on the devices do not	• Light bulb(s) burned out.	
illuminate.	Breaker is OFF or tripped.	
	Light not properly installed.	
	• Wiring error.	
	In-wall dimmer or switch:	
	 FASS on the in-wall dimmer or switch is in the off position. 	
	Plug-in lamp dimmer:	
	Outlet is switched off.	
	• Lamp is turned off.	
	Lamp is not plugged in.	
Light does not respond to Pico remote control.	• The in-wall dimmer or switch failed to pair with Pico remote control.	
	• The in-wall dimmer or switch is already at the light level the Pico remote control is sending.	
	 The Pico remote control is outside the 30 ft (9 m) operating range. 	
	The Pico remote control battery is low.	
	• The Pico remote control battery is installed incorrectly.	
Bulbs turn off while being dimmed.	In-wall or plug-in lamp dimmer only:	
 Bulbs turn on at high light level but do not turn on at a low light level. 	Verify bulbs are marked dimmable and visit www.casetawireless.com/lowend for information on adjusting the dimmer for best bulb performance.	
 Bulbs flicker or flash when dimmed to a low light level. 		
• LED on in-wall switch is flashing or solid red color.	In-wall switch only: Proper bulb operation requires LUT-MLC installation. See Page 59.	
 Light stays on when the in-wall switch is turned off. 		
Top and middle LEDs are blinking rapidly.	Product detected an MLV fault (PRO Dimmer only) Connect Neutral to the dimmer (required for MLV load) 	
Top and second from bottom LEDs are blinking rapidly.	No Load (PRO Dimmer only) • Apply or replace the load	
Top three LEDs flashing	Over voltage detected, verify unit does not have MLV load and is in reverse phase	
Middle three LEDs flashing	Over temperature event, verify unit is not overloaded	
Bottom three LEDs flashing	Over current detected, verify unit does not have ELV load while in forward phase	

Go to www.casetawireless.com/support for additional troubleshooting suggestions.



Fan Troubleshooting

Symptoms	Probable cause and action	
Fan does not turn ON and no indicator lights turn ON.	 Front Accessible Service Switch (FASS) is pulled out to the OFF position. Push FASS in fully to the ON position. 	
	• Fan pull chain is in the OFF position. Set pull chain speed to high.	
	Neutral wire is not connected. Check wiring.	
	• Breaker is OFF or tripped (or fuse blown). Reset breaker or replace fuse. If condition persists, contact Lutron Customer Assistance or a licensed electrician.	
	Load and Line wires may be reversed. Check wiring.	
Fan does not turn ON and indicator lights are ON.	Fan direction switch is between forward and reverse. Set in-wall switch to desired position.	
Fan vibrates or wobbles.	• Fan direction switch is between forward and reverse. Set in-wall switch to desired position.	
	• Fan blades must be balanced. See fan manufacturers installation guide to balance fan.	
Fan speed is too slow.	Set fan pull chain speed to high.	
Fan does not respond to Pico remote control.	• The fan control failed to pair with Pico remote control.	
	• The fan control is already at the fan speed level that the Pico remote control is sending.	
	 The Pico remote control is outside the 30 ft (9 m) operating range. 	
	• The Pico remote control battery is low.	
	• The Pico remote control battery is installed incorrectly.	

Go to www.casetawireless.com/support for additional troubleshooting suggestions.

Lutron, Lutron, Caséta, Claro, Pico, and FASS are trademarks or registered trademarks of Lutron Electronics Co., Inc. in the US and/or other countries.

All product names, logos, and brands are property of their respective owners.

© 2014 - 2020 Lutron Electronics Co., Inc.

Lutron Contact Numbers

WORLD HEADQUARTERS

Lutron Electronics Co., Inc. 7200 Suter Road Coopersburg, PA 18036-1299 TEL: +1.610.282.3800 FAX: +1.610.282.1243 Customer Assistance: 1.844.LUTRON1

Mexico: +1.888.235.2910 Central/South America: +1.610.282.6701

support@lutron.com

www.lutron.com/support